DMS64 User Manual

Contents

1 Introduction 4

1.1 Summary 4
1.2 System Requirements 4
1.3 Installing Guide 5
1.4 Reinstalling Guide 8
1.5 Device Register 10
1.6 DMS64 Display Mode 16
1.7 DMS64 Main Function 18
1.7.1 Live 18
1.7.2 User Account 19
1.7.3 Group 20
1.7.4 Search 20
1.7.5 E Map 21
1.7.6 Status 21
1.7.7 Multi Theme 22

2 Registry Setup and Service 23

2.1 Live 23
2.1.1 Summary 23
2.1.2 Create a Live Screen 23
2.1.3 Modify a Live Screen 24
2.1.4 Delete a Live Screen 27
2.1.5 Bind Device to Live Screen 28
2.1.6 Setup Live Screen 29
2.1.7 Live Screen Switch Mode 30
2.1.8 Live Screen Snap Shot 30
2.1.9 Live Screen Archiving 31
2.1.10 Live Screen Lay Out 32
2.1.11 Live Screen Context Menu 33
2.2 Search 34
2.2.1 Summary 34
2.2.2 Search Button State 34
2.2.3 Playback (Forward, Backward) 35
2.2.4 Snapshot (BMP, JPG) 36

2.2.5 Print 37
2.2.6 Archive 38
2.2.7 Log 39
2.3 EMAP 40
2.3.1 Summary 40
2.3.2 Create a Emap Screen 40
2.3.3 Modify a Emap Screen 42
2.3.4 Delete a Emap Screen 43
2.3.5 Bind Device to Emap Screen 44
2.3.6 Emap Screen Event Color 45
2.3.7 Emap Screen Event Action 45
2.3.8 Emap Screen Popup (Manual/ Auto) 46
2.3.9 Emap Screen Switch(Manual/ Auto) 47
2.4 STATUS 48
2.4.1 Summary 48
2.4.2 Create a STATUS Screen 48
2.4.3 Modify a STATUS Screen 50
2.4.4 Delete a STATUS Screen 51
2.4.5 Bind a STATUS Screen. 52
2.4.6 STATUS Screen Event Icon 53
2.4.7 STATUS Screen Popup 54
2.5 System 55
2.5.1 Summary 55
2.5.2 System Button State 55
2.5.3 Device (Register) 56
2.5.4 User (Register) 57
2.5.5 NVR(Register) 59
2.5.6 Snapshot (Archive) 61
2.5.7 Archiving (Archive) 62
2.5.8 Device (Log) -> DVR Log 63
2.5.9 System (Log) -> DMS64 Log 64
2.5.10 Remote Setup (Log) 65
2.5.11 Connect (Connect) 66
2.5.12 Disconnect (Connect) 66

1 Introduction

1.1 Summary

DMS64 has been developed to control the DVR, various Network Camera's image data and I/O Control efficiently.

The DVR and IP CAMERA supplier focuses on how many number of screens could be shown on one screen and how it could be controlled. Thus, Live screen of 16, 32 64 multi screens could be seen. But we would require thinking about the bandwidth when multi channels are transmitted.

Central Monitoring System (DMS64) could control the image and data by screen and it shows great countermeasures during emergency by getting screen and urgent data.
Also, it has point of doing efficient control of other remote site's DVR by central monitoring system.

DMS64 is able to do the following functions to able to execute for constructing central monitoring system.

- Unlimited DVR register
- Monitoring 64 channels on one screen
- Live screen display for each screen type
- Surveillance functions for E-Map
- Device Event and information monitoring for Status Screen
- Remote recording and remote backup function
- PTZ Control
- Event view function for Alarm control (Motion, Sensor, Site Connection logs)

DMS64 allows user to manage the setup of DVR (System setup / Recording Setup) and retrieve the recording data of DVR from remote site.
Through E Map, users can notice Alarm, Events easily and allow control the alarm.
64 channels live monitoring feature provides more powerful centralized management ability to the observer

1.2 System Requirements

Items	Minimum Requirements
CPU	Pentium 2.80 GHz or higher
RAM	1GB MB or higher
O/S	Windows XP Professional or higher (32Bit)
Acceleration	DirectX® 8.0 or higher
Resolution	1280 x 1024 as a minimum
Video Card	NVIDIA GeForce 8500 GT 256MB or higher
Network Card	1000Base-TX (1Gbps) or higher operation; must match the network configuration
Monitor	1EA

NOTE: **Recommended PC specifications for Central Management Software (** DMS64**).**

1.3 Installing Guide

- Insert the Installation DMS64 disk on the CD/DVD Drive. The following screen as

below would appear by Install Shield Wizard.

- Press [Next] button to proceed to next stage.

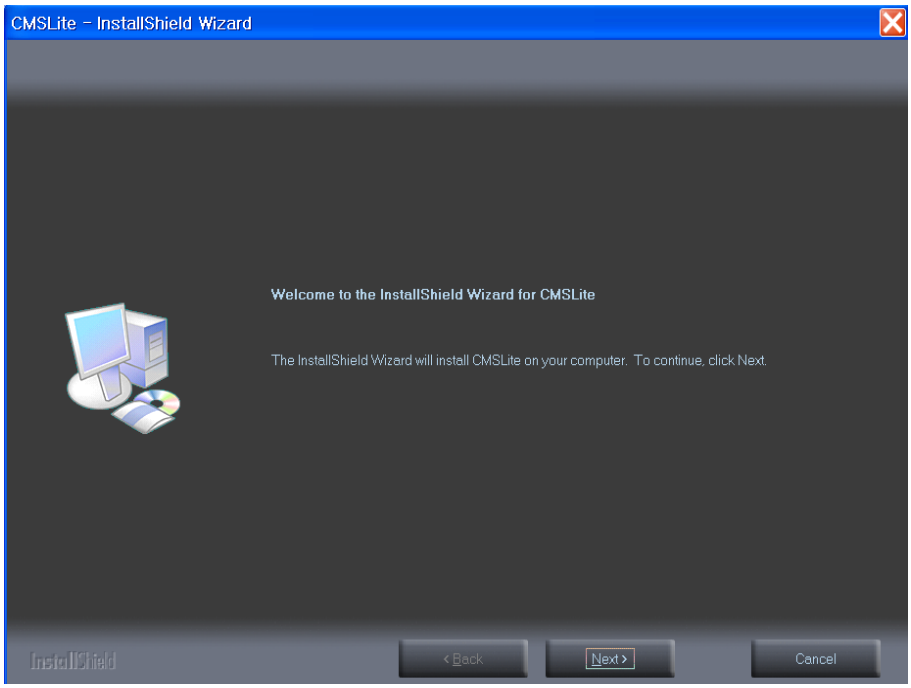
CMSLite – InstallShield Wizard
Welcome to the InstallShield Wizard for CMSLite
The InstallShield Wizard will install CMSLite on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

NOTE: **Double click the Setup file on the CD/DVD Drive to start the Install Shield Wizard if the Auto Run does not function.**

- The DMS64 could be installed as the following below.
- Click the [Close] button after installation is completed

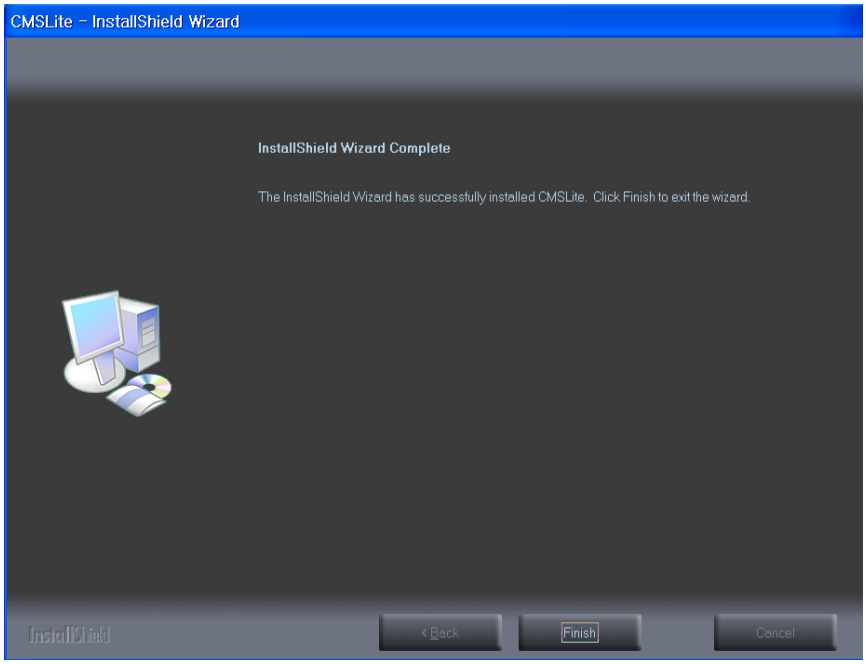
CMSLite – InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed CMSLite. Click Finish to exit the wizard.
InstallShield
< Back
Finish
Cancel

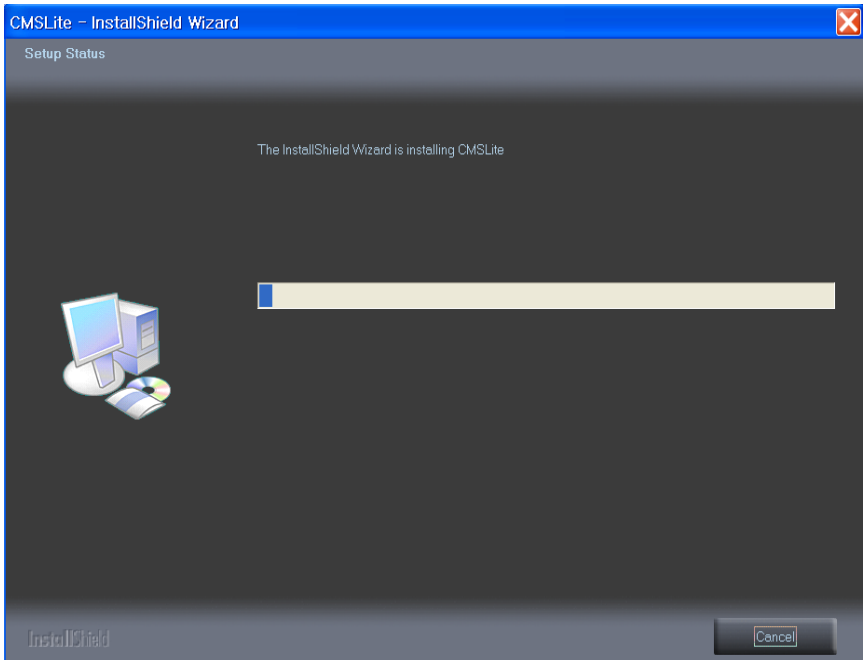
CMSLite – InstallShield Wizard
Setup Status
The InstallShield Wizard is installing CMSLite
InstallShield
Cancel

1.4 Reinstalling Guide

- If the DMS64 is re-installed on PC, the DMS64 could be installed as the following below.
- When removing all installed features, press [Next] button to proceed to next stage.

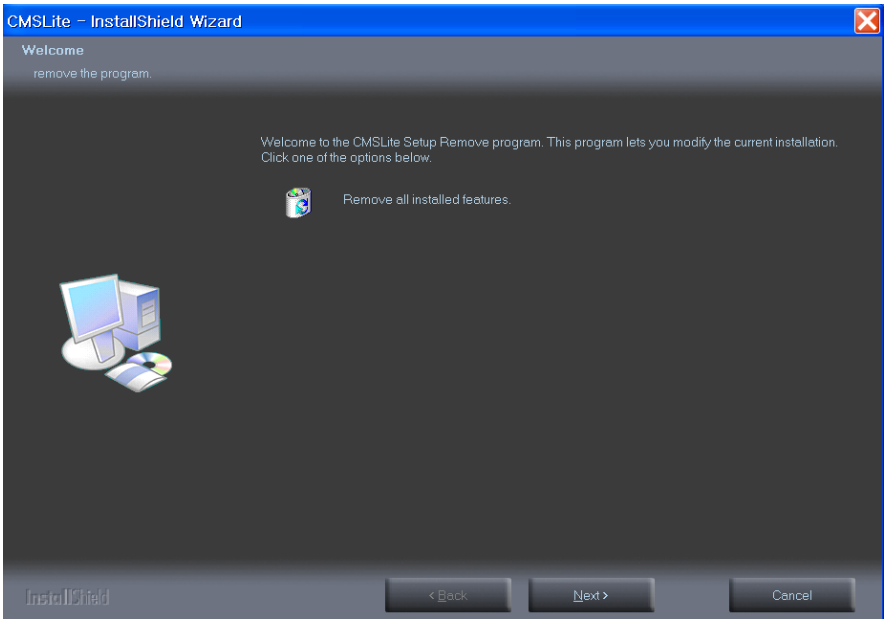
CMSLite - InstallShield Wizard
Welcome
remove the program.
Welcome to the CMSLite Setup Remove program. This program lets you modify the current installation. Click one of the options below.
Remove all installed features.
InstallShield
< Back
Next >
Cancel

- If you reinstall the DMS64 after remove, the DMS64 could be installed as the following below.
- Press [Repair] and [Next] button to proceed to next stage for Successful reinstallation.
- After Repairing Visual C++, you have to restart the computer for the changes to take effect.

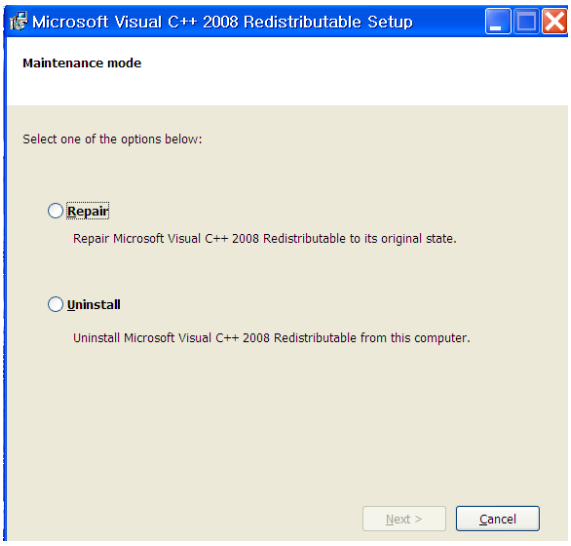
Microsoft Visual C++ 2008 Redistributable Setup
Maintenance mode
Select one of the options below:
Repair
Repair Microsoft Visual C++ 2008 Redistributable to its original state.
Uninstall
Uninstall Microsoft Visual C++ 2008 Redistributable from this computer.
Next >
Cancel

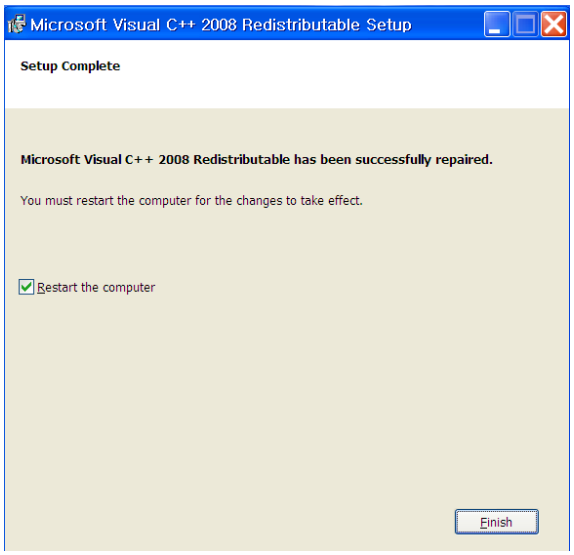
Microsoft Visual C++ 2008 Redistributable Setup
Setup Complete
Microsoft Visual C++ 2008 Redistributable has been successfully repaired.
You must restart the computer for the changes to take effect.
Restart the computer
Finish

NOTE: When removing DMS64, it couldn't remove Visual C++ at the same time .
When removing DMS64, it couldn't remove Visual C++ at the same time.

.

1.5 Device Register

- Input ID and PASSWORD (as Default ADMIN / 1234).

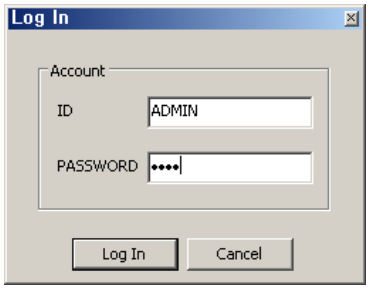

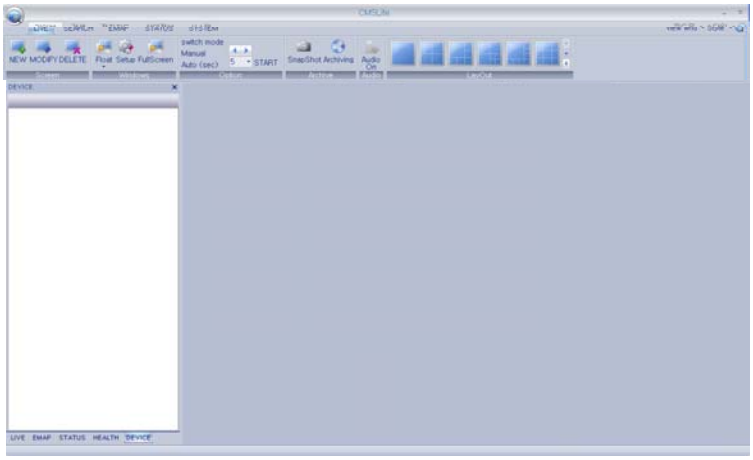

- Go to SYSTEM menu, Select Device Item.

- Input Connection information of DVR.

1) The Company selection tab:

   DR_N group – DR4N, DR8N(2), DR16N(2), DR8NRT, DR16NRT, DR4N-LITE

   IP_CAM - PIXELPRO(VGA), PIXELPRO(720P), PIXELPRO(1080P)

   DR_H group – DR4H, DR8H, DR16H

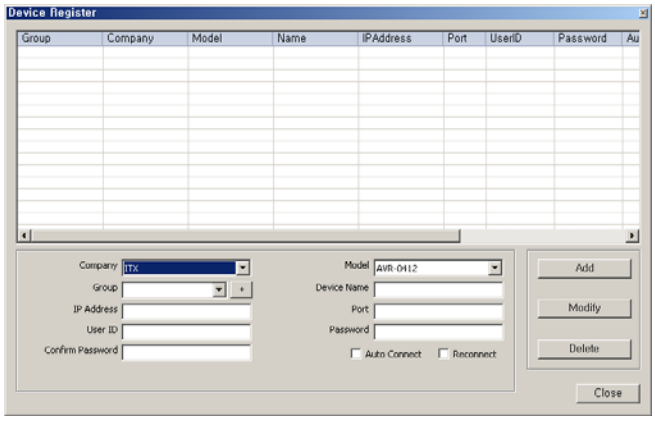

2) Select model of DVR.

3) Create a group for DVR.

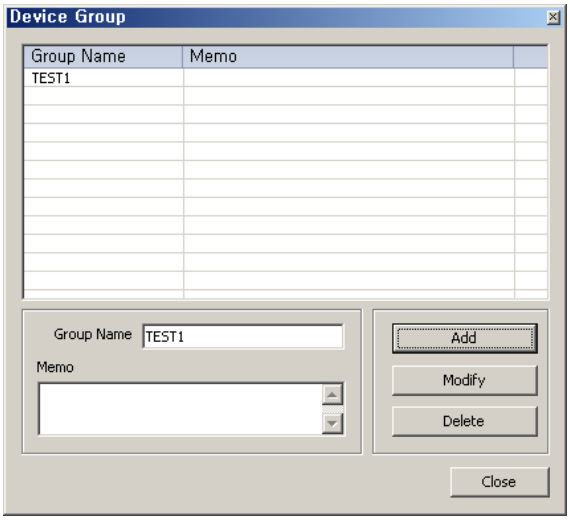

4) Input Device name and IP address of DVR.

5) Input Port number (DR_N: Client port, DR_H and IP CAM: web port number of system).

6) Input ID, Password of DVR then press ADD.

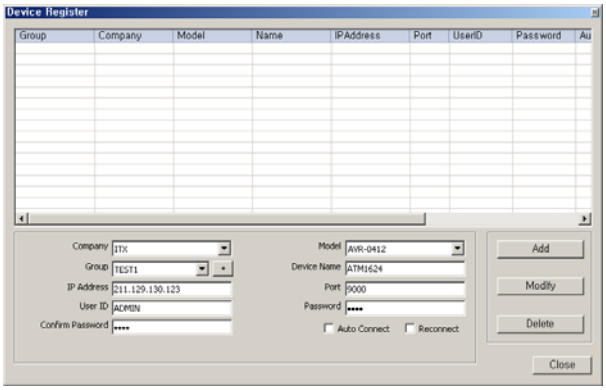

7) Now finish registering the DVR on DMS64.

8) You have to check the “Auto connect” surely.

- Go to LIVE menu.
- Select NEW icon for create new Live screen.

- Input Name of screen mode.

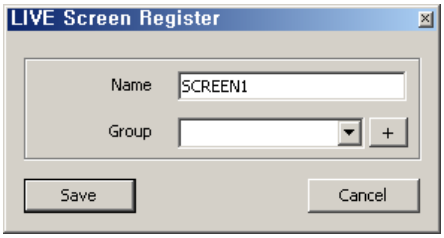

- Create a Group of Screen.

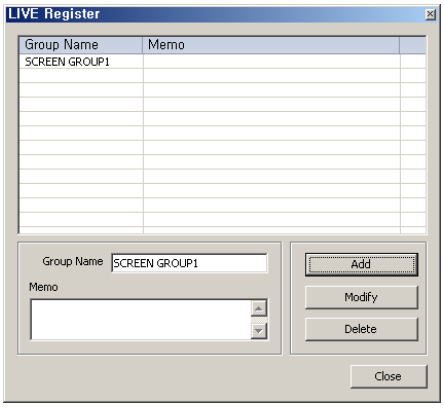

- Press Add Icon and close window.

- User will get below screen.

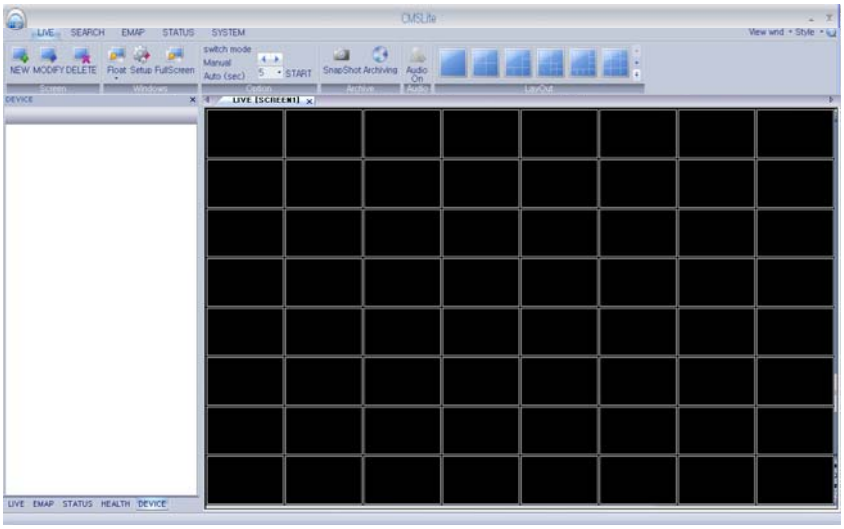

- Go to SYSTEM menu again and press Connect Icon.

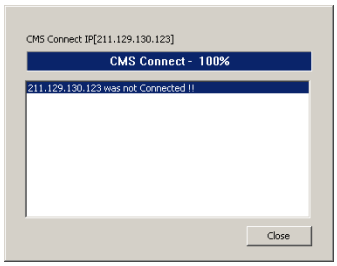

- Press LIVE tab on Left tree panel.

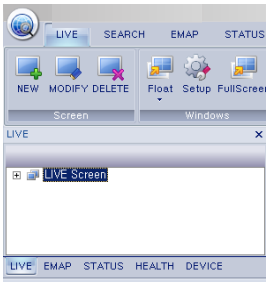

- Expand the item on the tree, then double click last item.

  User will get new window on right panel.

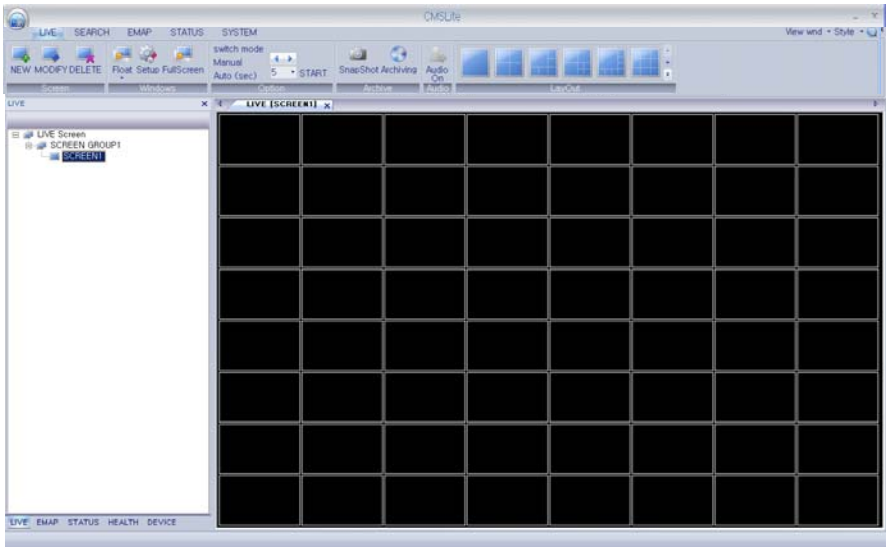

- Now select DEVICE Tab on Left bottom Panel, and expand the tree.

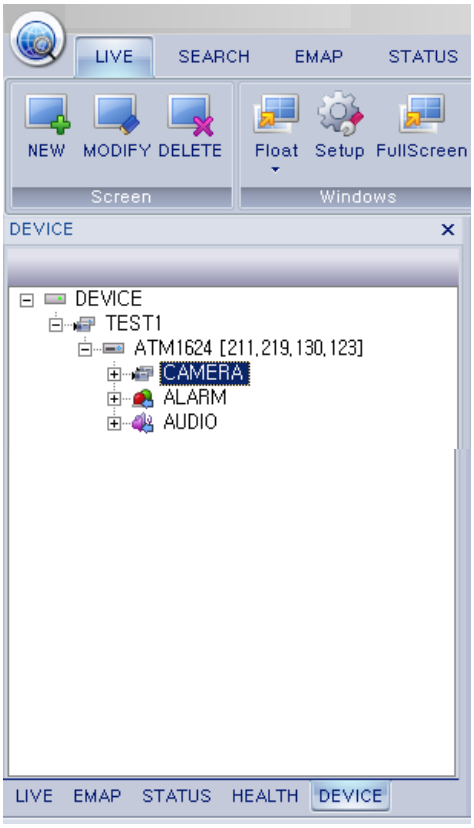

- Drag the CAMERA Item to Right window Panel.

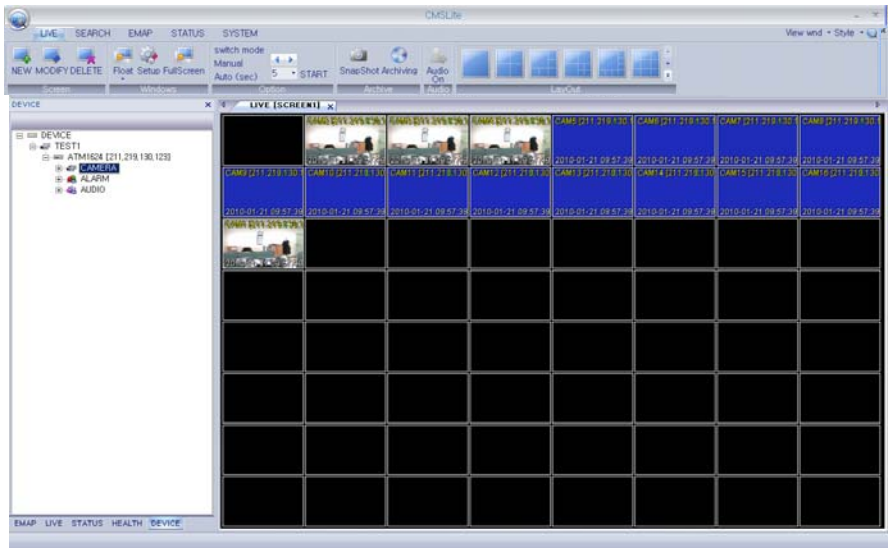

1.6 DMS64 Display Mode

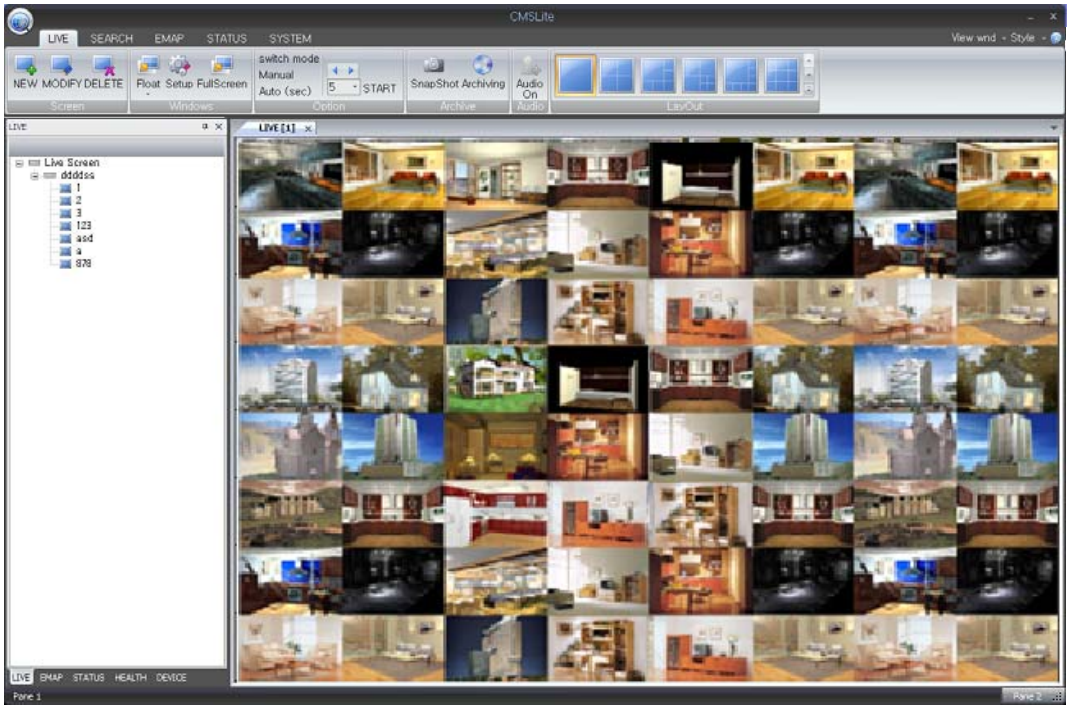

NOTE: **It is constructed to control the functions and buttons of each and every windows**

1. **Category Tab Button**

Use to select Screen menu of selected Category.

2. **Frame Style Buttons**

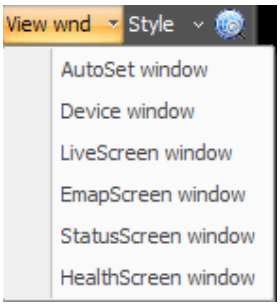

Use to initialize / set layout of left Tree.

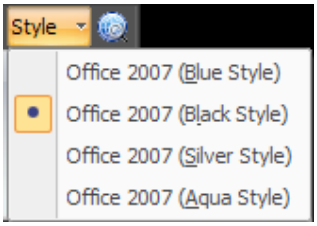

Use to change the Frame style.

3. **LIVE Tree**

   Use to see the information list of the registered LIVE Screen.

4. **EMAP Tree**

   Use to see the information list of the registered EMAP Screen.

5. **STATUS Tree**

   Use to see the information list of the registered STATUS Screen.

6. **Device Tree**

   Use to see the information list of the registered device.

1.7 DMS64 Main Function

1.7.1 Live

- Live image of the registered device could be seen and the multiple screen could be seen until 64 multiple screens. Manage (increase/decrease, print, snapshot, previous image) each define image separately by displaying each panel's image or multi-display of camera image could be controlled by various screen mode and map image.
- Also, it supports real-time event monitoring for suitable event management and it could control each camera and show animation affect for login history and alarm of event viewer.

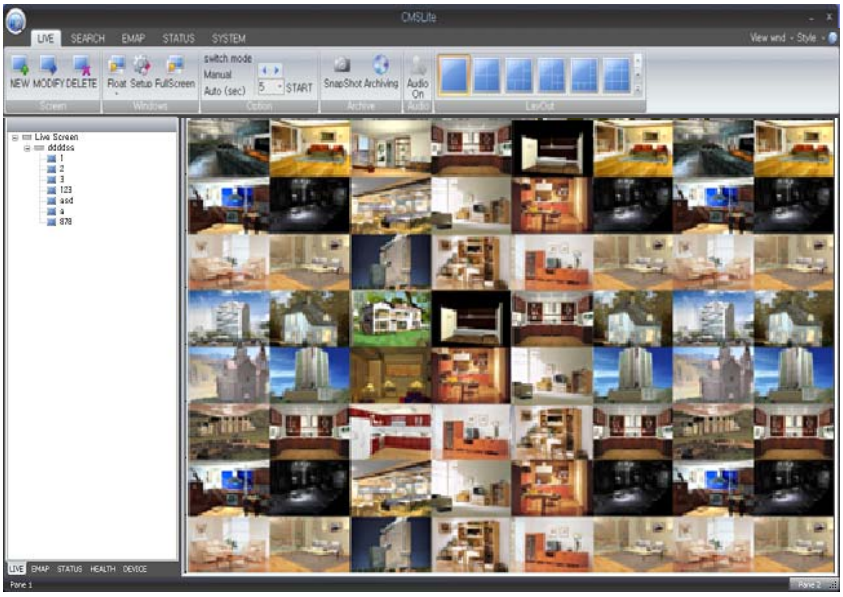

1.7.2 User Account

- Function to register DMS64 user and Device. Give authority to the user, then the control for DMS64 could be done and supports backup functions for each user's profile and data base.

NOTE: **UESR** authority to Limit DMS64 function use.
It couldn't separately set & save per each UESR.

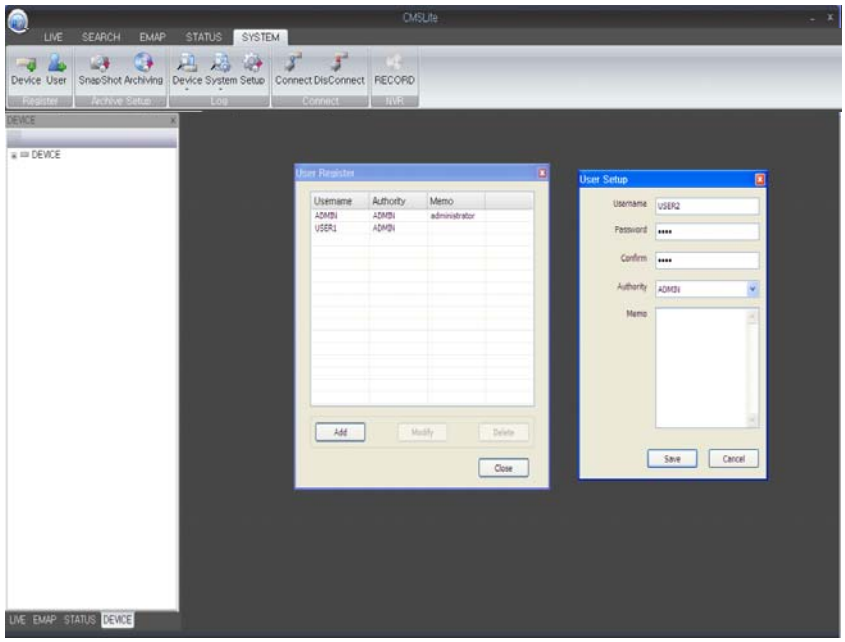

1.7.3 Group

- Group function provide screen or map service registration and it could structure objects (camera, sensor, relay, mike, speaker and etc) on the monitoring screen structure and map image.
- More efficient control could be done by approaching the central monitoring system with the various service mode registered on each group.

1.7.4 Search

- It is function to see recorded image monitoring for saved event log history and backup the recorded image by AVI file.

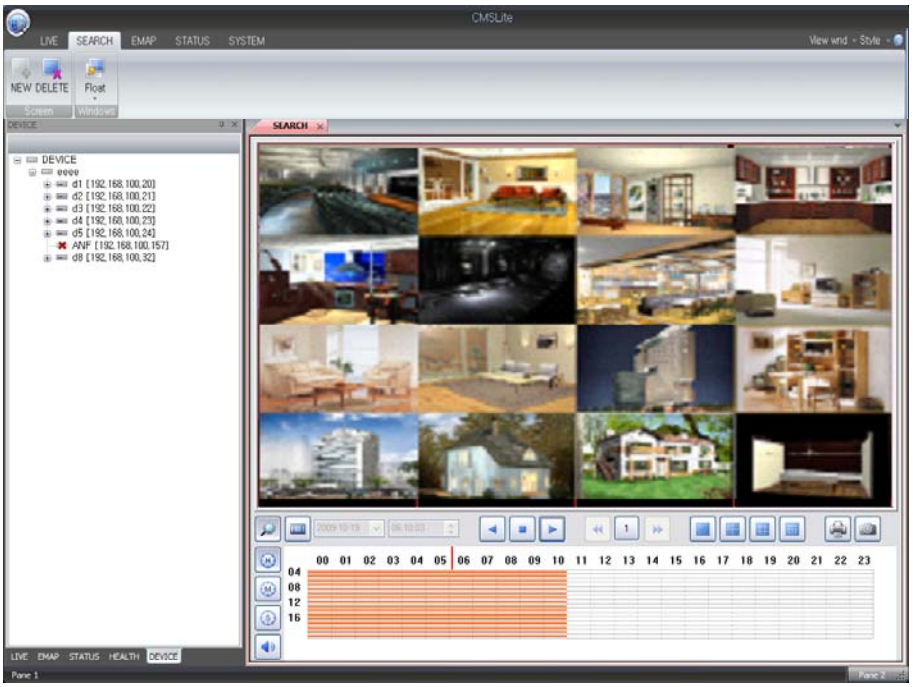

1.7.5 E Map

- It is function to support the Multi-Display of the screen mode on the map image and monitoring of the camera can be done on the E map itself.
- Provide control functions for each camera and when event happens on the specified camera, more efficient visual monitoring system, using animation effect and map link by map moving functions.

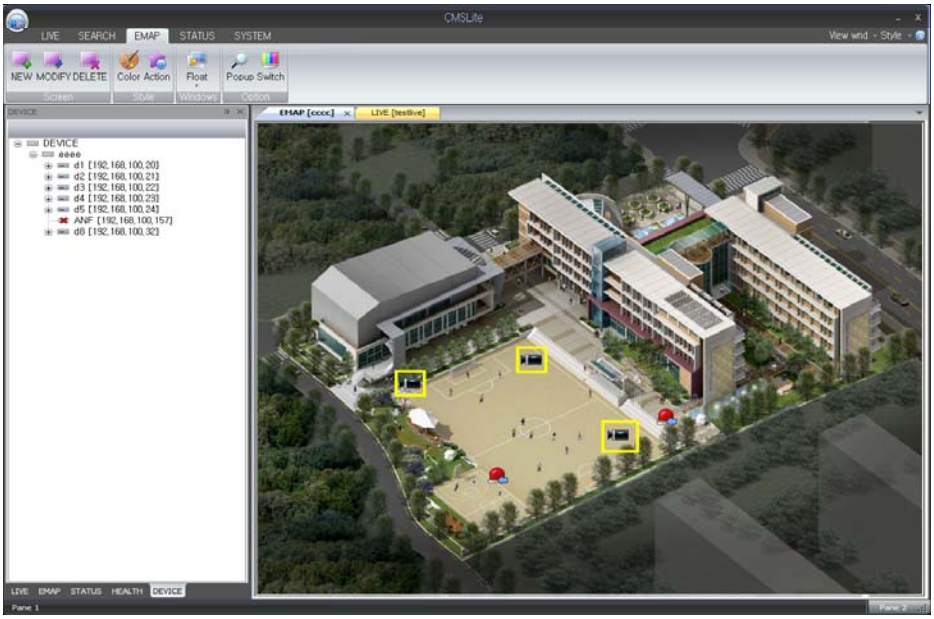

1.7.6 Status

- Show the event (video, audio, alarm) which performs in the facility linked with DMS64 by icon independent by channel for virtualization and at the same time to be able to monitor several facilities and all channels at real-time.

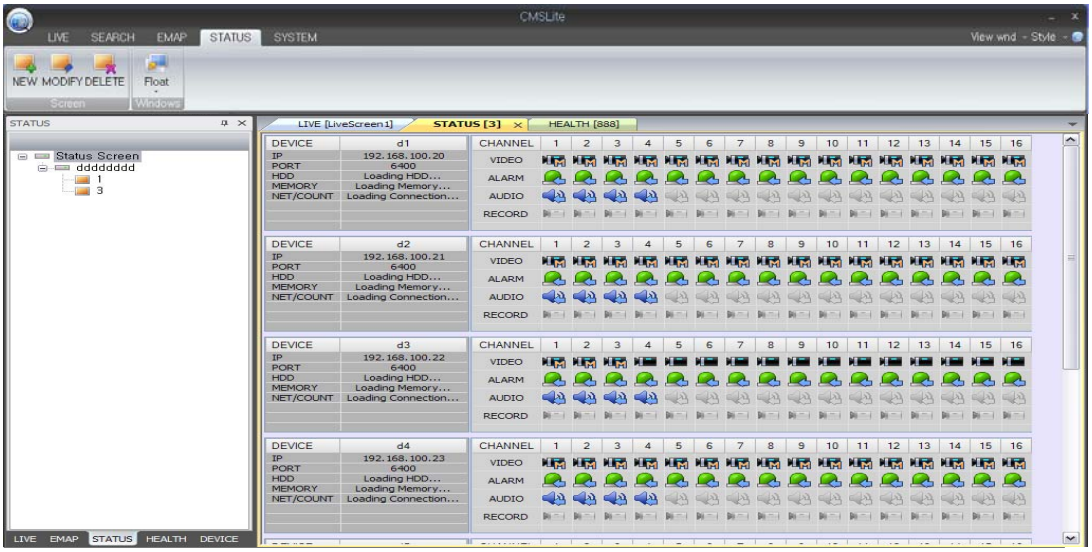

1.7.7 Multi Theme

- It is a function to modify the window screen, according to the user's taste and it supports 4 kinds of multi theme.

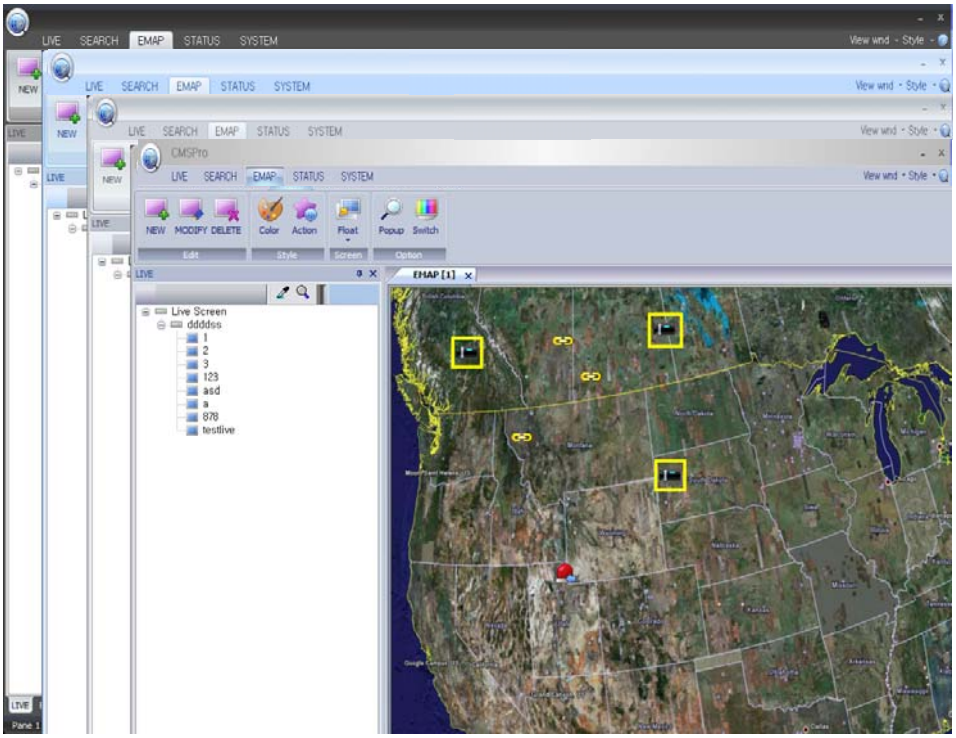

2 Registry Setup and Service

2.1 Live

2.1.1 Summary

- Use to See Live image after selecting output Device on DMS64.
- It is supported to Split Mode, Full Screen Mode and Switch Mode except on basic live image output, then use the Snapshot, it is a function to Archiving functions of live image.
- Level of authority for each user's DMS64 Control could be managed by registering profile for each authority.

2.1.2 Create a Live Screen

- Click [LIVE] -> [NEW] on the DMS64 menu and the following Live Screen could be seen on the DMS64 menu.
- Click [+] button as below and Group registration screen could be seen as below.

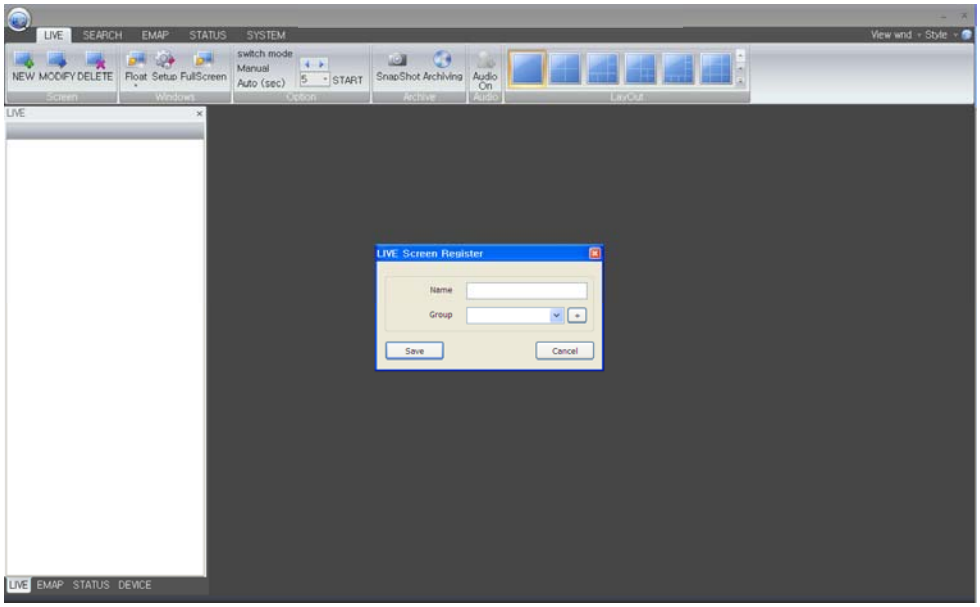

- Use to input Group Name and register group as below.

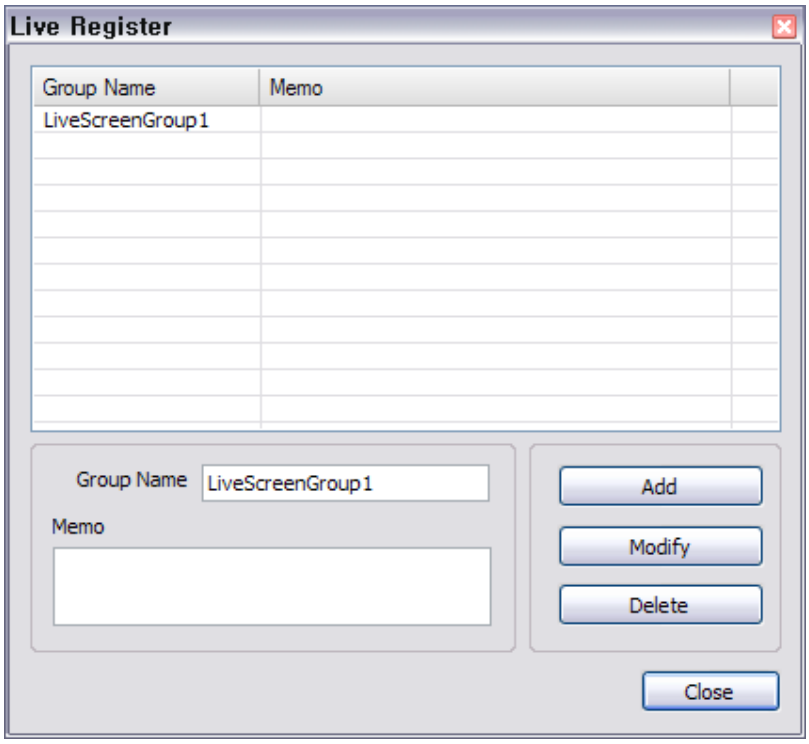

- After Group Register, input Live Screen name and save.

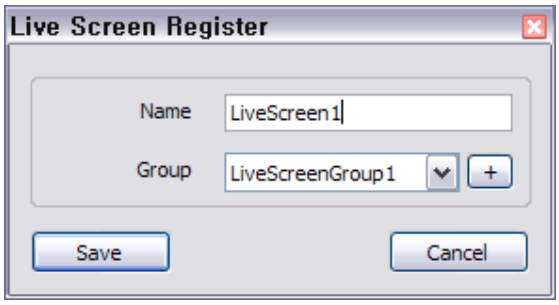

- It could see Live Screen image as below.

2.1.3 Modify a Live Screen

- Click the [LIVE] -> [MODIFY] as selecting Live Screen on DMS64, then it could see

Live Screen Modify image as below.

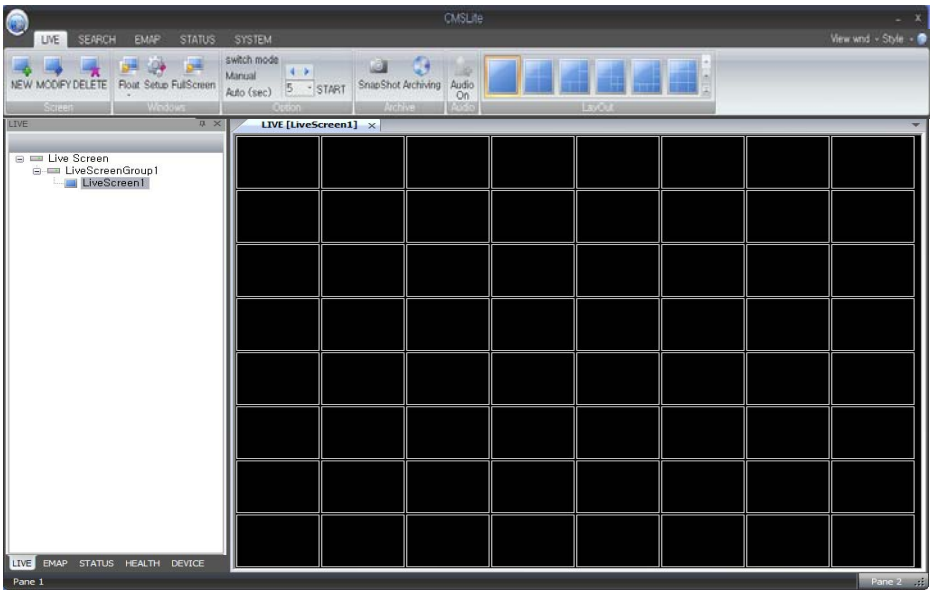

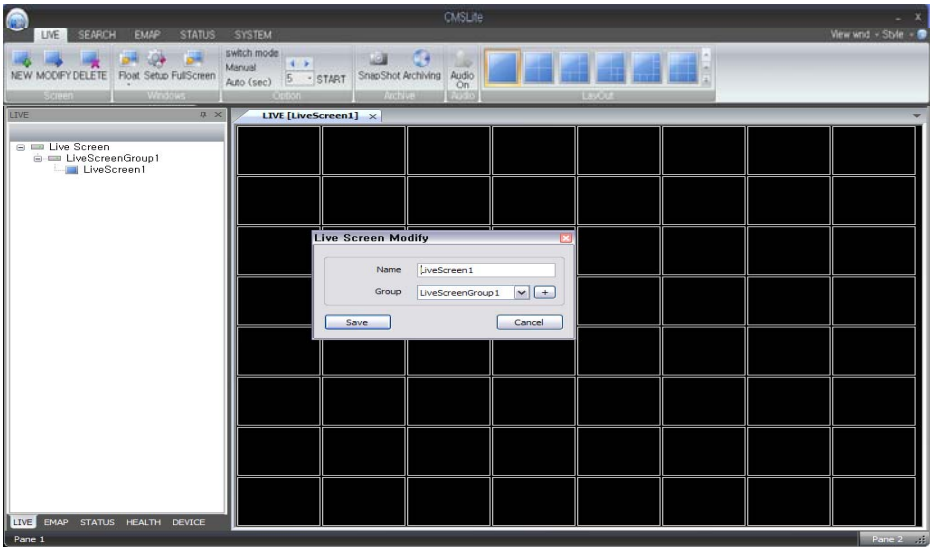

- Input the Live Screen name or select Live Screen Group, then press the Save button.

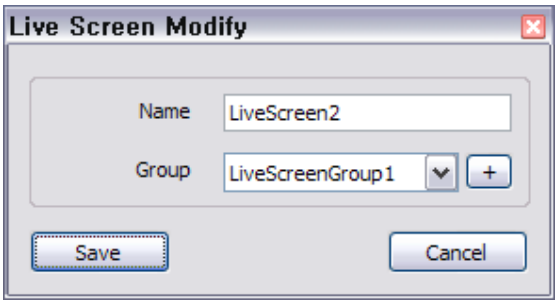

- It could check Modified LIVE SCREEN as below.

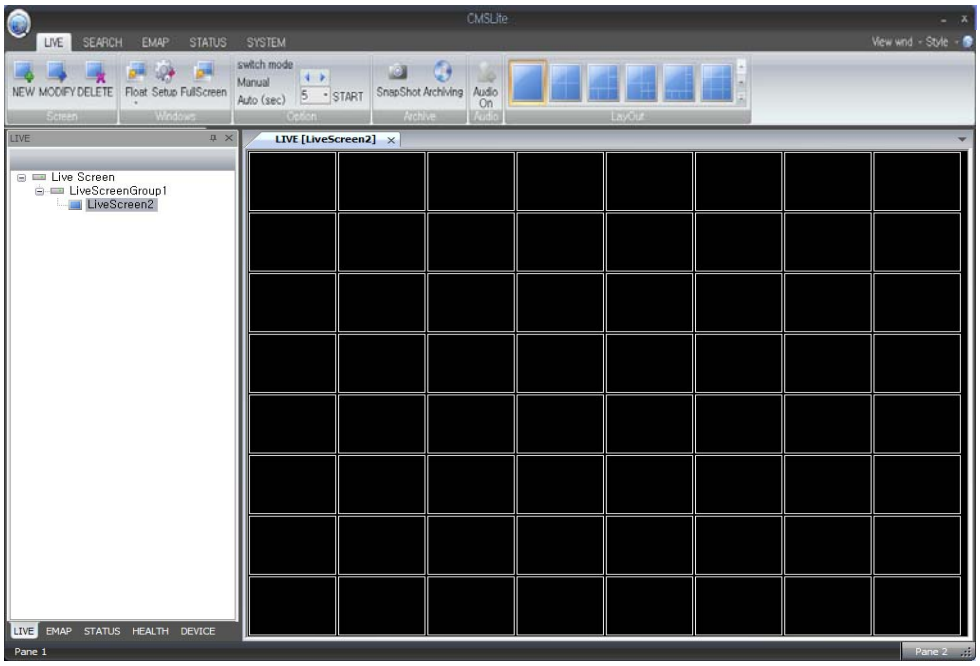

2.1.4 Delete a Live Screen

- Click the [LIVE] -> [DELETE] as selecting LIVE SCREEN TAB on DMS64 menu, then It could delete the LIVE SCREEN.

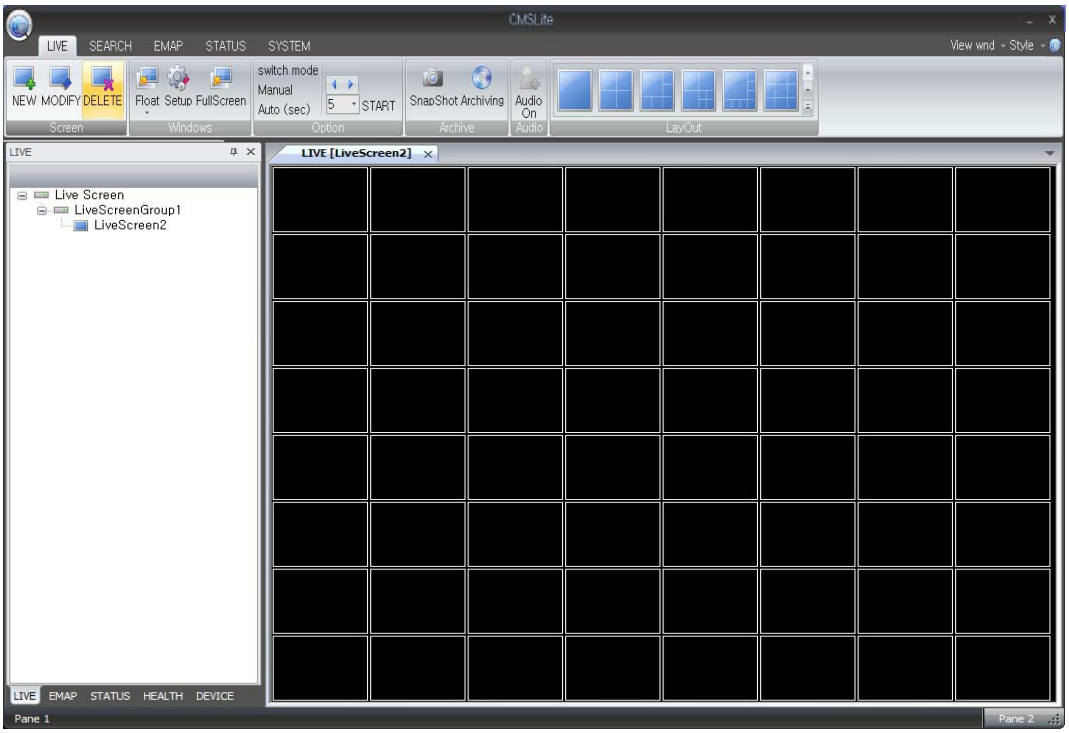

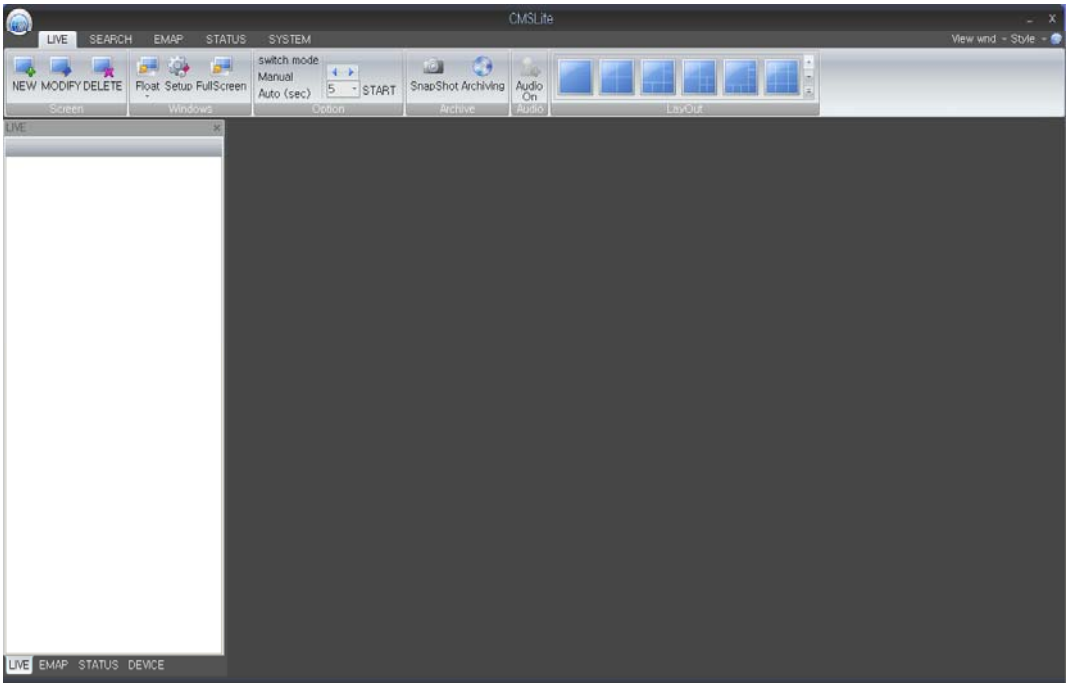

2.1.5 Bind Device to Live Screen

- Now select DEVICE TAB on LEFT bottom Panel, then expand the tree
- Drag & Drop the CAMERA ITEM to Right window Panel, It could blind Device to Live Screen.

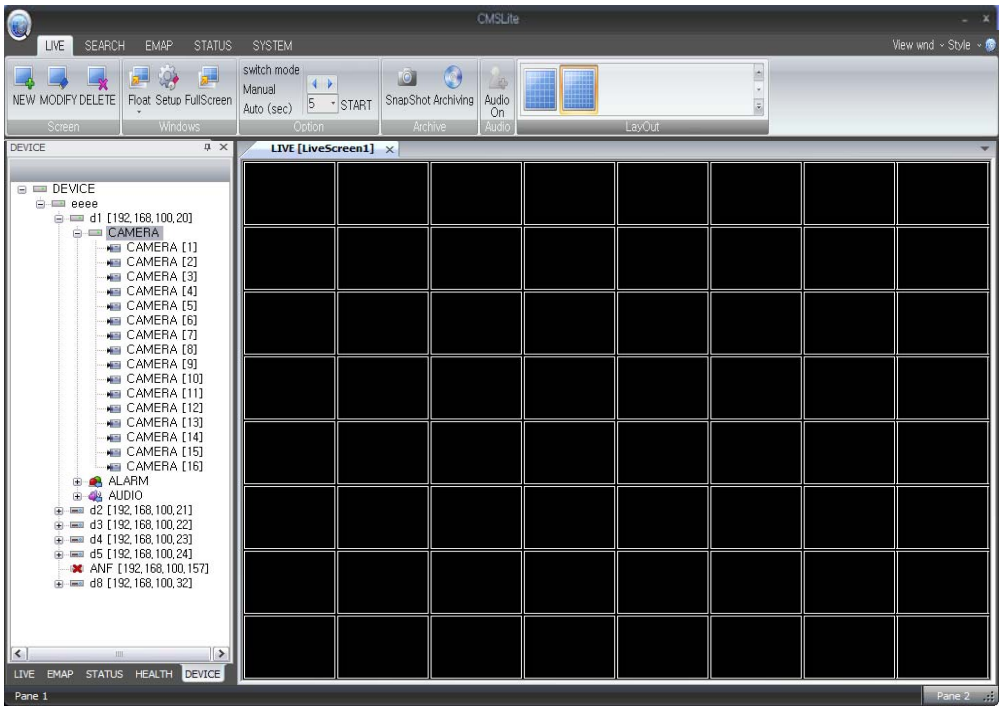

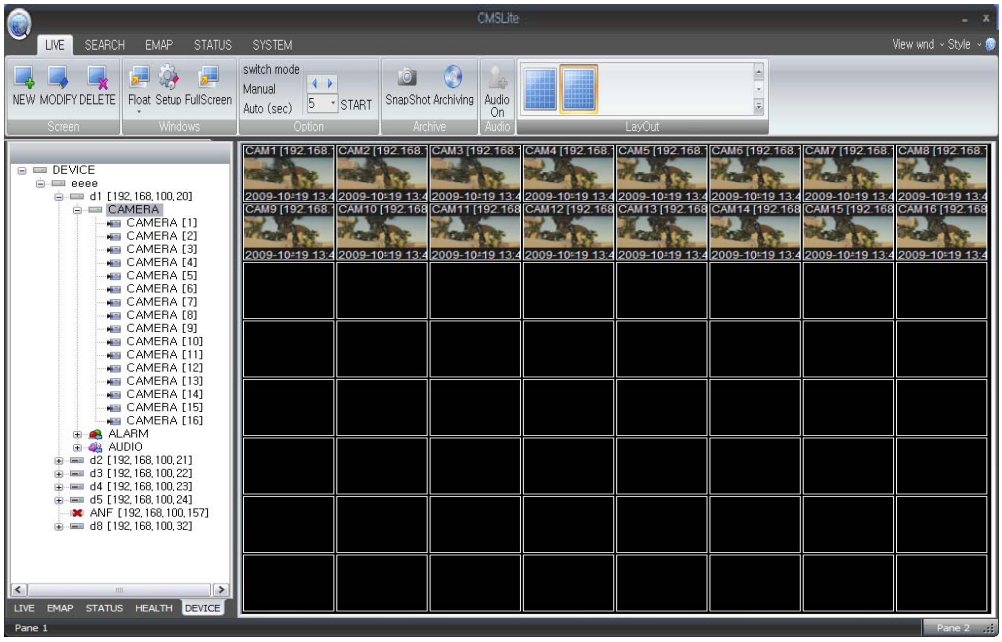

NOTE: **Live Screen mapping is saved to first drag & drop Action.(Device -> Screen)**
It couldn't save Screen Moving within the Screen

2.1.6 Setup Live Screen

- Now select DEVICE TAB on LEFT bottom Panel, then expand the tree
- Drag & Drop the CAMERA ITEM to Right window Panel, It could blind Device to Live Screen.

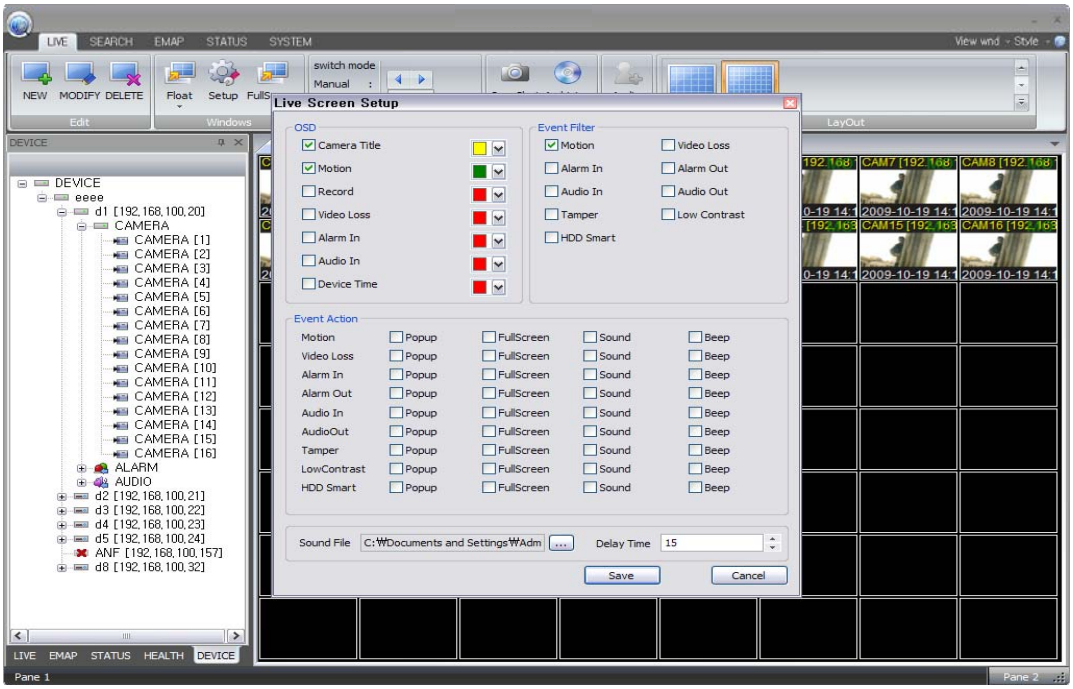

Setup

OSD

Set the OSD on Screen.

Set the Color on each OSD.

Event Filter

Set the Event on using Live.

Ignore the unselected Event on Live.

Event Action

Select Action form on each Event.

Sound File

Set the Action time of Event Action.

Ignore another Event on time.

2.1.7 Live Screen Switch Mode

- It could search remained Live Channel with (<), (>) buttons on [LIVE] -> [Option].
- It could be automatically searched with pressing START button, after Auto (sec) setup.

NOTE: **Designated Screens are progressed on Switch Mode, step by step.**
If you want to change Switch Mode Sequence, change the Screen Sequence.

2.1.8 Live Screen Snap Shot

- Screen Live image could be saved to image file on press [LIVE] -> [Snap Shot] button.

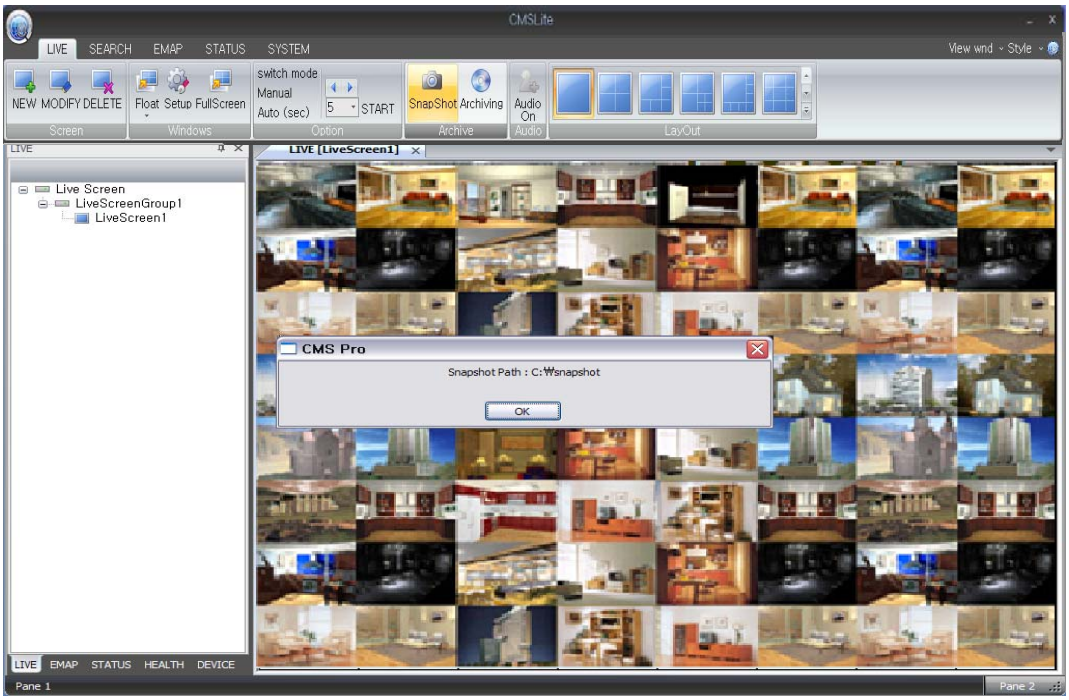

2.1.9 Live Screen Archiving

- Screen Live image could be saved to video (AVI) file on press [LIVE] -> [Archiving] button.

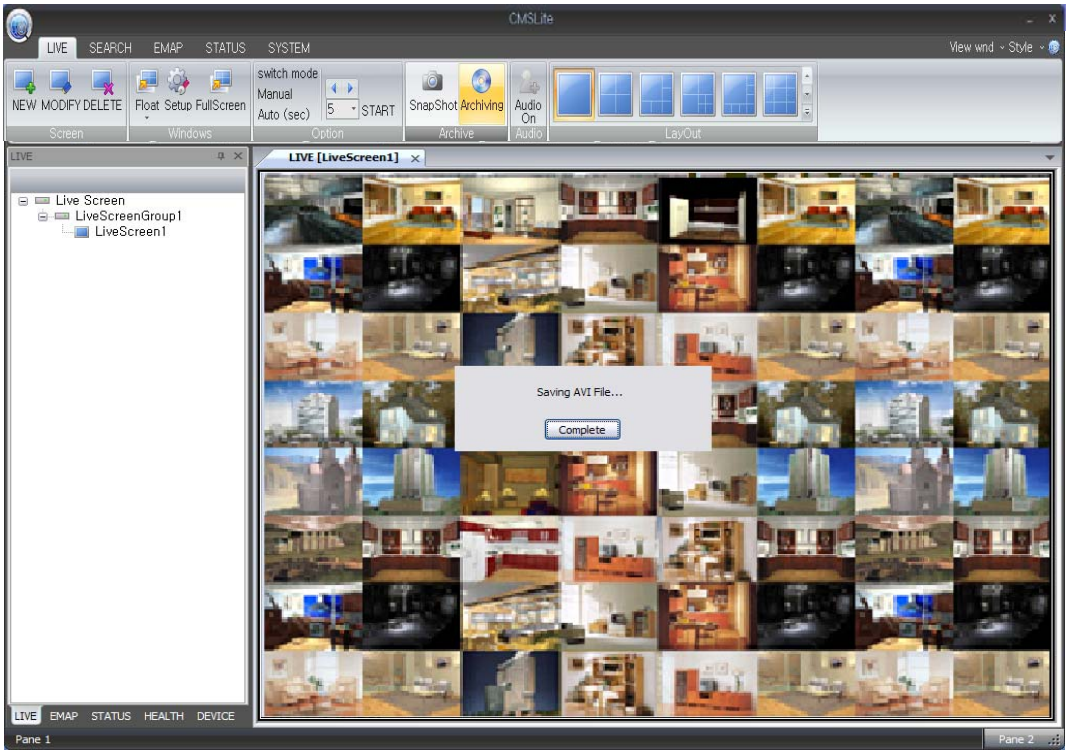

2.1.10 Live Screen Lay Out

- The Screen division provided by DMS64 are 14 types which are [1, 4, 6, 7, 8, 9, 10, 12, 13, 16, 21, 29, 36, 64].

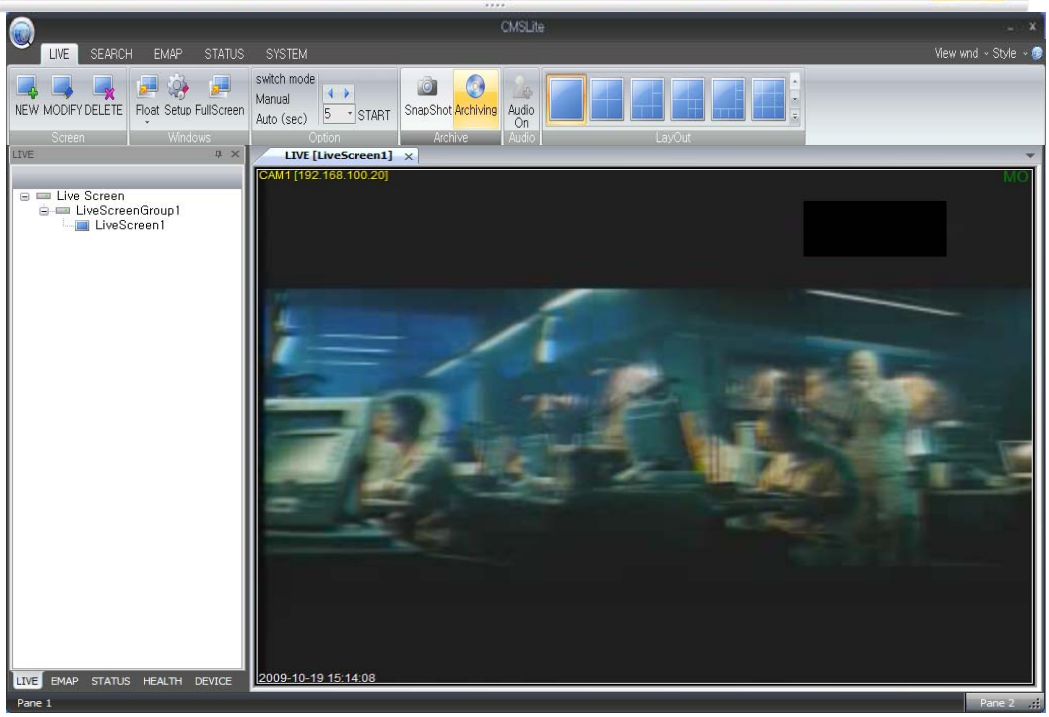

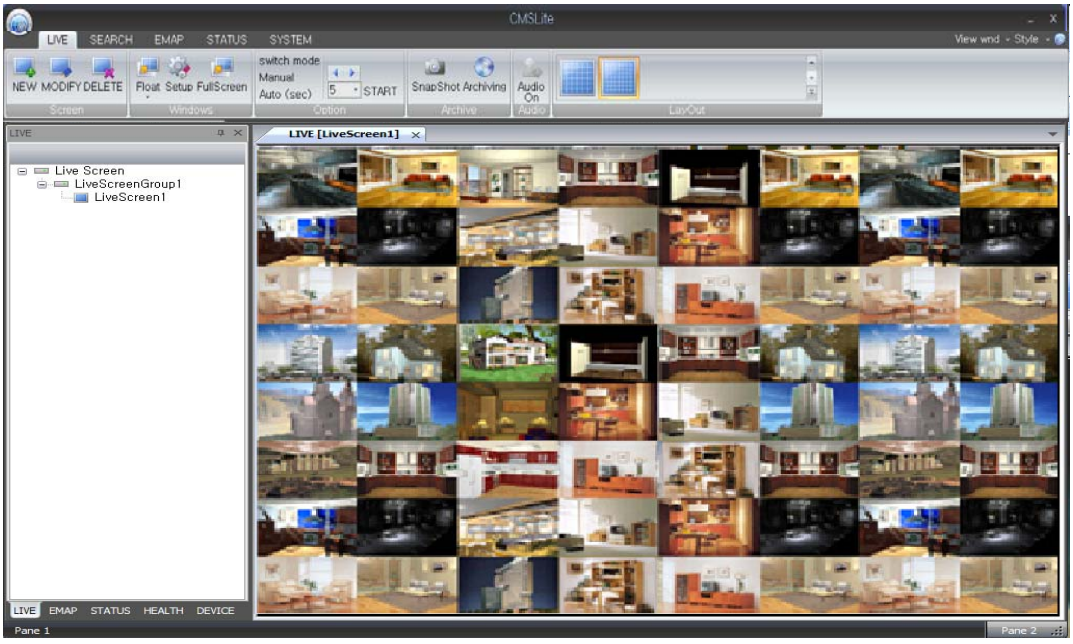

2.1.11 Live Screen Context Menu

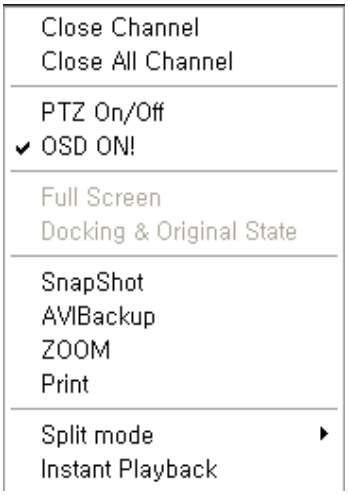

Close Channel – Close the selected live channel.

Close All Channels – Close all selected live channels.

PTZ On/Off – Can use the PTZ supporting Device by Remote Control as below.

OSD ON – Can use on/off OSD with showing on the screen.

Full Screen – Can see Full Screen with showing on the screen.

Docking & Original State – Can Return to the Normal mode on Full Screen.

Snap Shot – Can save the present image with showing on the screen.

AVI Backup - Can save the present the video (AVI) file with showing on the screen.

ZOOM – Can see ZOOM mode with showing on the screen.

Print – Can Printout with showing on the screen.

Split – Can change the Split mode on selecting as below.

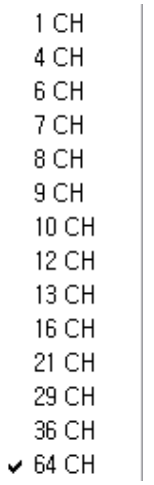

Instant Playback – Can use Instant Play function with showing on the screen.

2.2 Search

2.2.1 Summary

- Stand alone DVR can Playback DVR recording Data on PC.
- IP Camera can see recording Data on PC.
- Drag & Drop Device list of Device tree to Search UI for Search.
- It could not use any button before connection.

2.2.2 Search Button State

- New

  Generate as deleting the Search UI.

  Don't generate more than 1 Interface.
- Delete : Button for closing the Search UI.
- Float : Use to Float Search UI to another monitor.
- Search Forward : It could search Forward.
- Search Backward : It could search Backward.
- Search Stop : It could stop search.
- Display with 1/4/9/16 split.

- print button
- snap shot button
- archive button
- Open the recording Data folder on archive.
- Search DVR Log on connection.
- 2009-10-18 04:11:42 Provide right position Timeline.
- Change the Panorama mode.
- Change the Search mode.
- Draw per minute Time Line on time.
- Draw per second Time Line on time.
- Draw per day Time Line on Date.
- 1 Play the 1,2,4,8,16,32,64 times.
- Play the sound.

2.2.3 Playback (Forward, Backward)

- The timeline display also changes to show recorded footage on that day.
- Press Play button to choose the day and move to the timeline.
- During times playback, press the times playback and play.

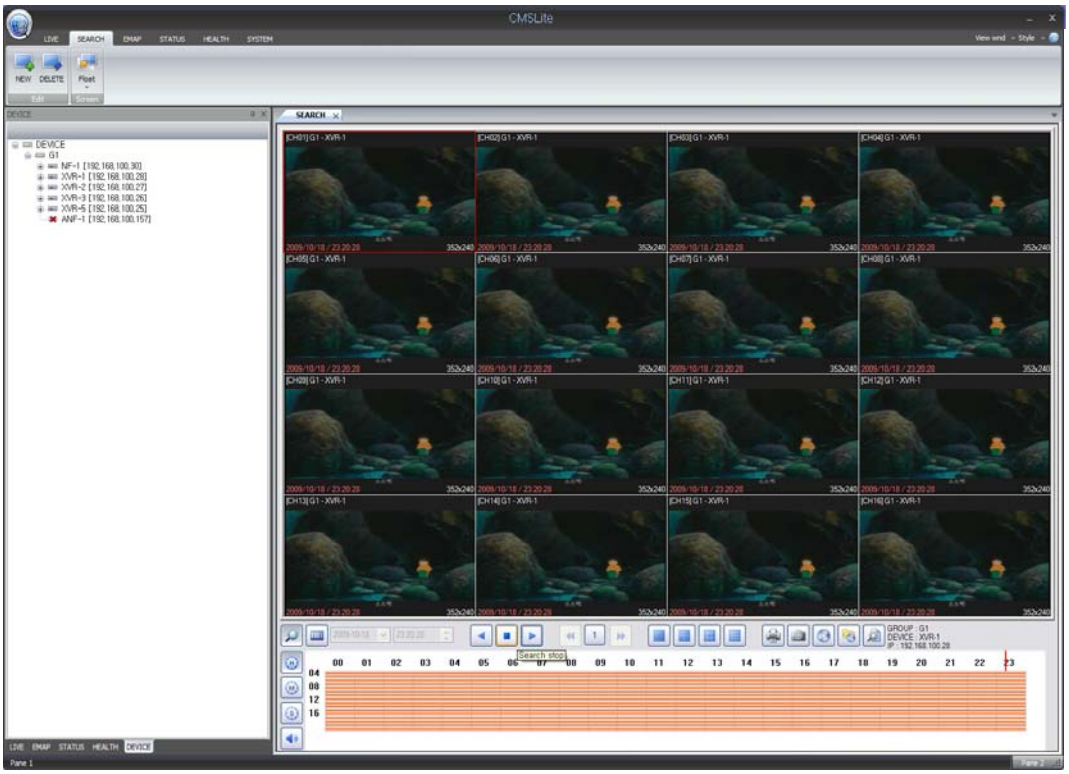

NOTE: **Support Panorama Search Function.**
Split Screen -> CH Selection -> Click Panorama **Button**

2.2.4 Snapshot (BMP, JPG)

- It is snapshot Screen.
- It could output recording Path and File Name, then open the recording folder.
- Click the Capture Screen, then it could see highly.

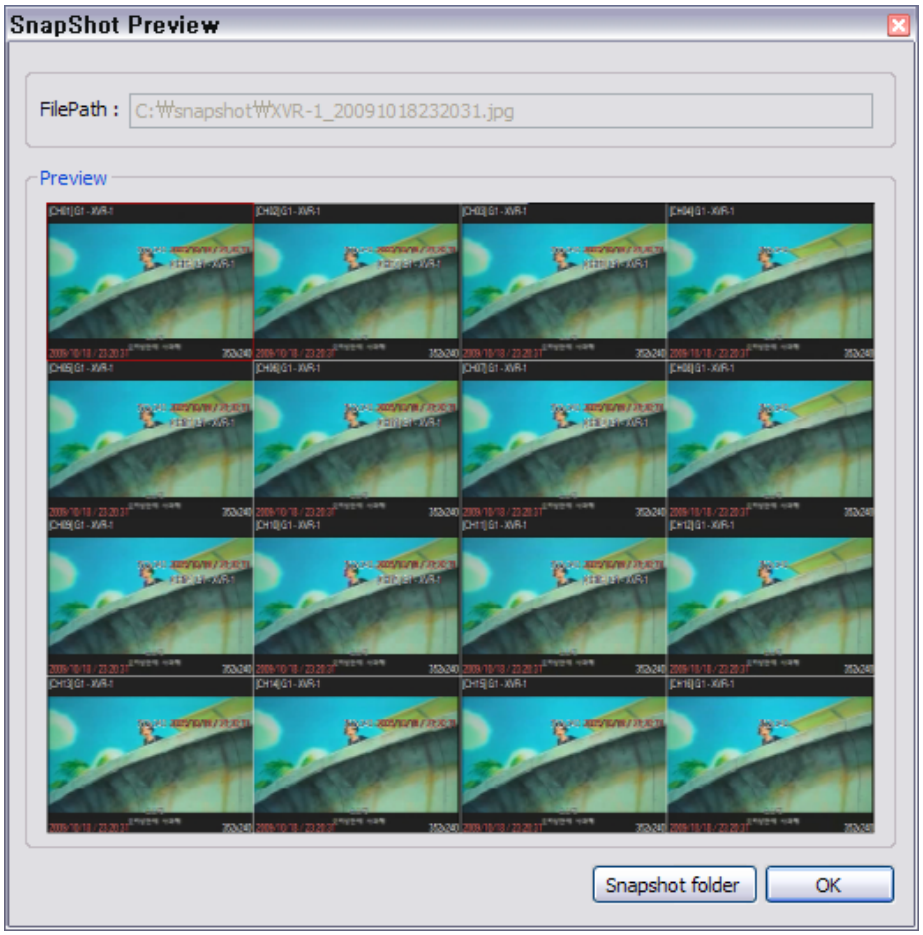

2.2.5 Print

- Function to print the selected image from the camera.
- Install the Driver from Print Corporation.

NOTE: **Print -> Screen Split Screen is printed. Selected Ch is not printed**

2.2.6 Archive

- It is Archive Screen.
- Video and audio for any channel can be selected for the Archive.

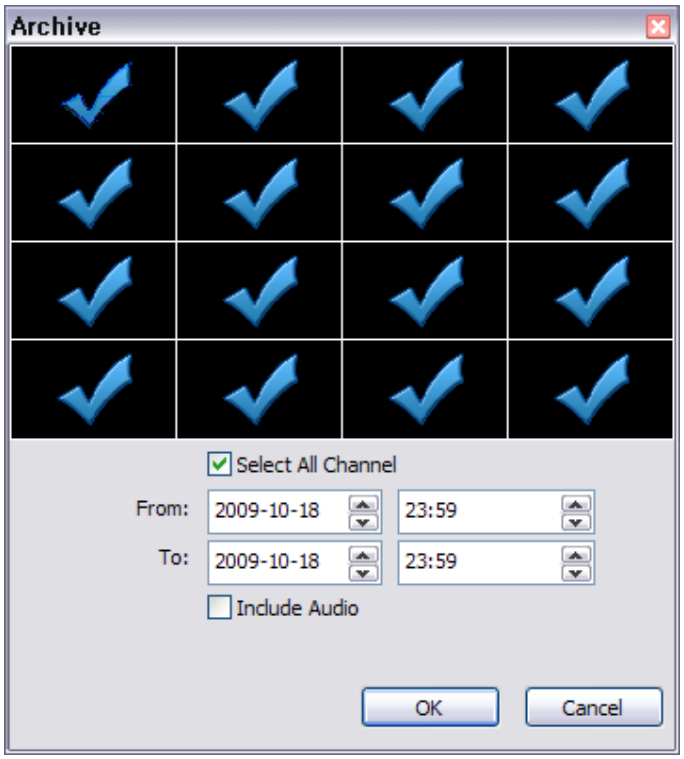

- Once all the desired archive setups have been selected, and press OK button.
- The DVR displays a list showing the exact information to be archived.
- If the Auto Close is selected on option, close the screen automatically after archive.
- It could open and see recording Save Folder

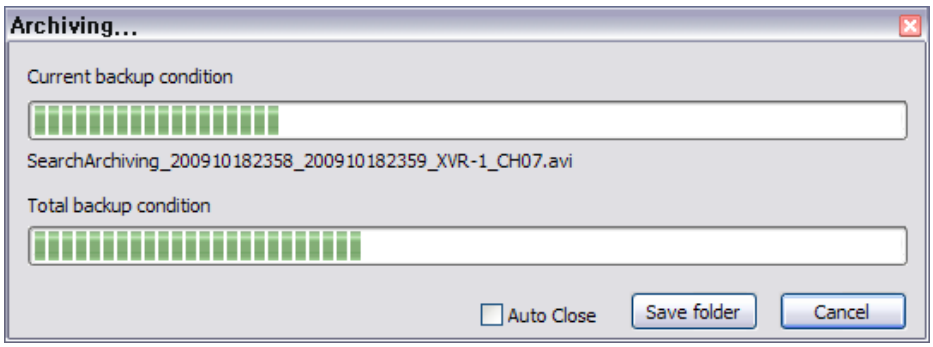

2.2.7 Log

- It could search Log of connecting DVR.
- Once all the desired time and filter have been selected, and press Search button.
- If Search logs are more than 100, it could research Prev, Next button.
- Search log could be printed or recorded on txt file.

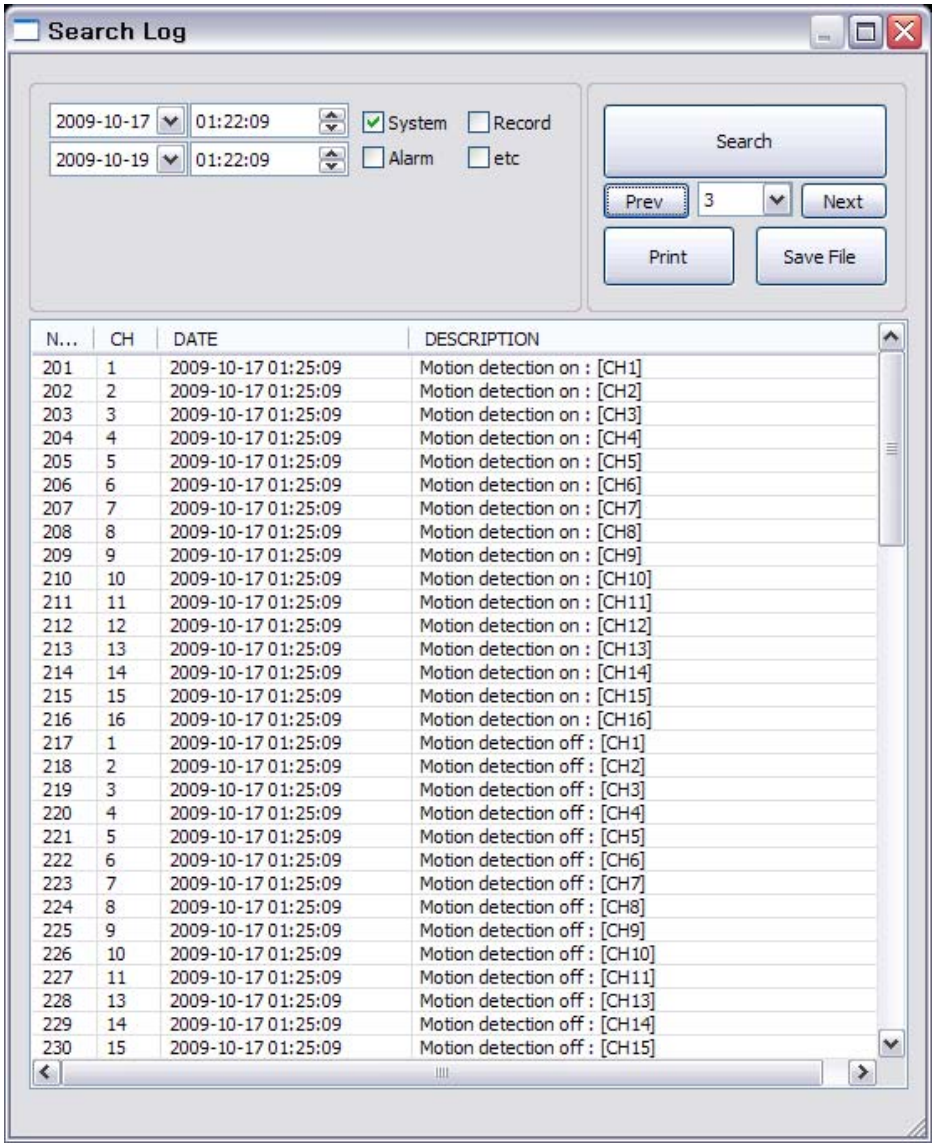

N...	CH	DATE	DESCRIPTION
201	1	2009-10-17 01:25:09	Motion detection on : [CH1]
202	2	2009-10-17 01:25:09	Motion detection on : [CH2]
203	3	2009-10-17 01:25:09	Motion detection on : [CH3]
204	4	2009-10-17 01:25:09	Motion detection on : [CH4]
205	5	2009-10-17 01:25:09	Motion detection on : [CH5]
206	6	2009-10-17 01:25:09	Motion detection on : [CH6]
207	7	2009-10-17 01:25:09	Motion detection on : [CH7]
208	8	2009-10-17 01:25:09	Motion detection on : [CH8]
209	9	2009-10-17 01:25:09	Motion detection on : [CH9]
210	10	2009-10-17 01:25:09	Motion detection on : [CH10]
211	11	2009-10-17 01:25:09	Motion detection on : [CH11]
212	12	2009-10-17 01:25:09	Motion detection on : [CH12]
213	13	2009-10-17 01:25:09	Motion detection on : [CH13]
214	14	2009-10-17 01:25:09	Motion detection on : [CH14]
215	15	2009-10-17 01:25:09	Motion detection on : [CH15]
216	16	2009-10-17 01:25:09	Motion detection on : [CH16]
217	1	2009-10-17 01:25:09	Motion detection off : [CH1]
218	2	2009-10-17 01:25:09	Motion detection off : [CH2]
219	3	2009-10-17 01:25:09	Motion detection off : [CH3]
220	4	2009-10-17 01:25:09	Motion detection off : [CH4]
221	5	2009-10-17 01:25:09	Motion detection off : [CH5]
222	6	2009-10-17 01:25:09	Motion detection off : [CH6]
223	7	2009-10-17 01:25:09	Motion detection off : [CH7]
224	8	2009-10-17 01:25:09	Motion detection off : [CH8]
225	9	2009-10-17 01:25:09	Motion detection off : [CH9]
226	10	2009-10-17 01:25:09	Motion detection off : [CH10]
227	11	2009-10-17 01:25:09	Motion detection off : [CH11]
228	13	2009-10-17 01:25:09	Motion detection off : [CH13]
229	14	2009-10-17 01:25:09	Motion detection off : [CH14]
230	15	2009-10-17 01:25:09	Motion detection off : [CH15]

2.3 EMAP

2.3.1 Summary

- It is a function for efficient central monitoring system by allocating the cameras of the registered device on the map.

2.3.2 Create a Emap Screen

- Click [EMAP] -> [NEW] to see the Emap registration window on the DMS64 menu.
- Click the [+] button as below to see Emap Group registration screen.

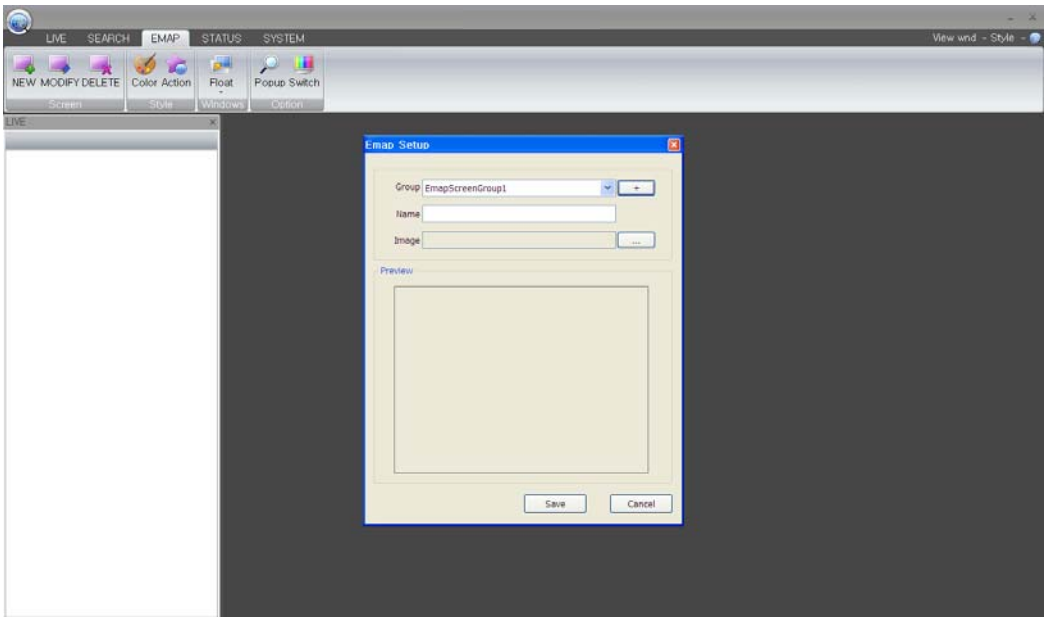

Input the Group name and Click the Add as below.

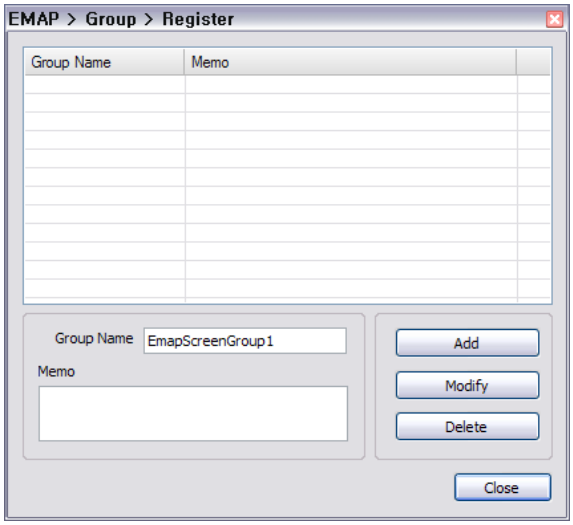

Enter the Screen name at Name as below and click the […] button to register the Map Group on the “Group tree” window.

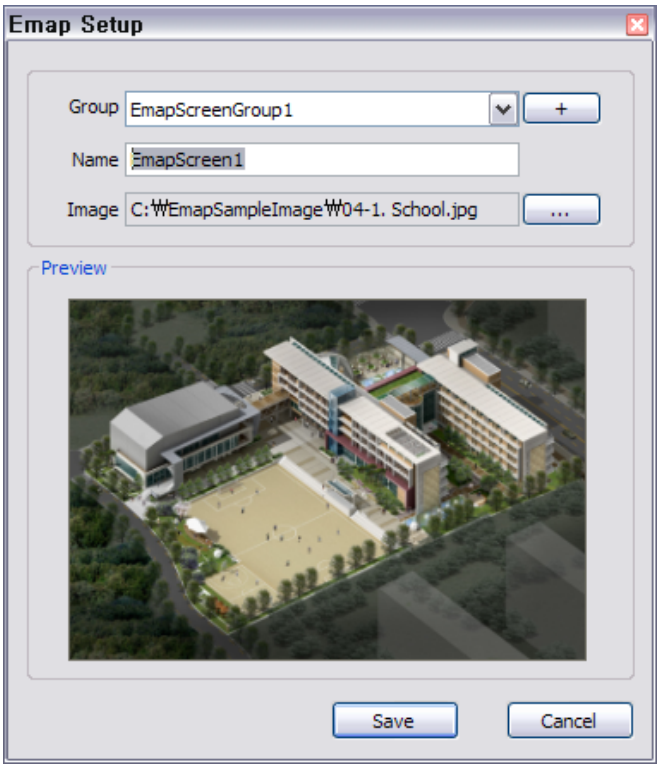

The initial Emap Screen after Save.

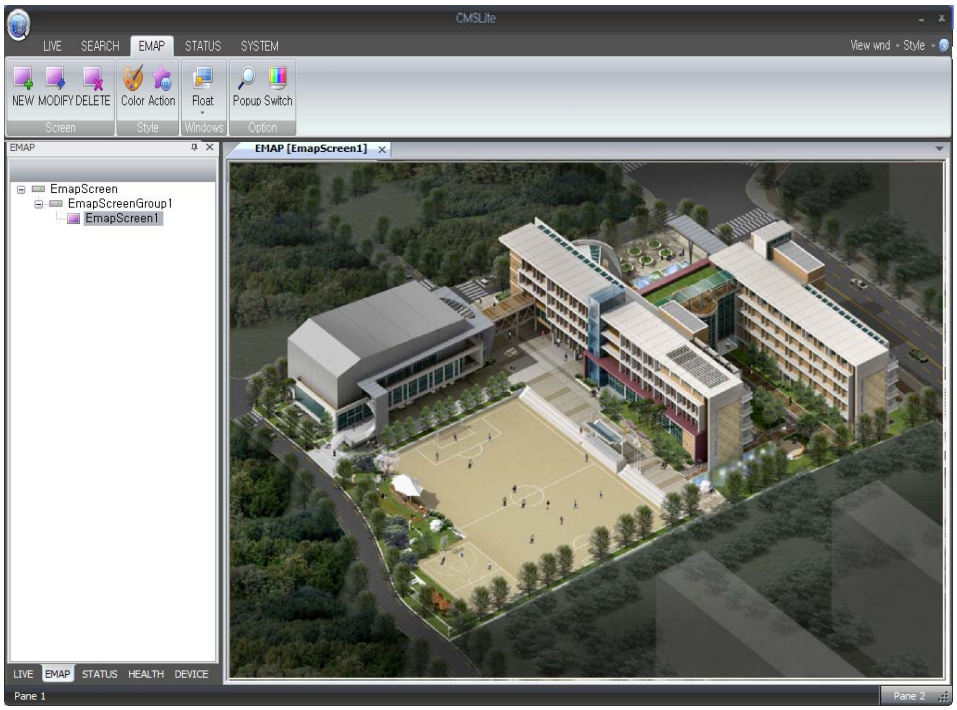

2.3.3 Modify a Emap Screen

Click [EMAP] -> [MODIFY] on selected EMAP Screen, then it could see EMAP Screen Modify screen.

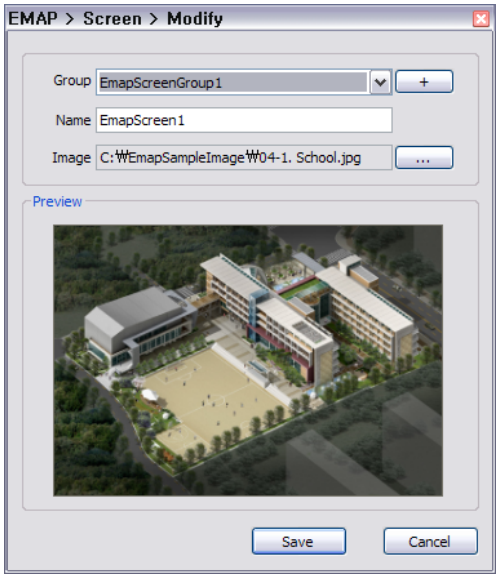

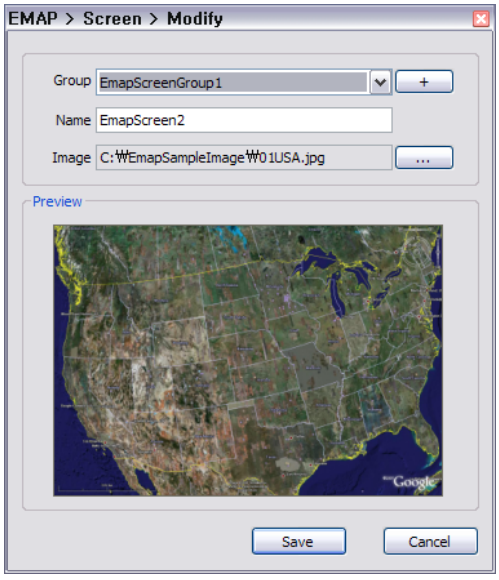

2.3.4 Delete a Emap Screen

If you click the [EMAP] -> [DELETE] on selected EMAP Screen, delete EMAP Screen.

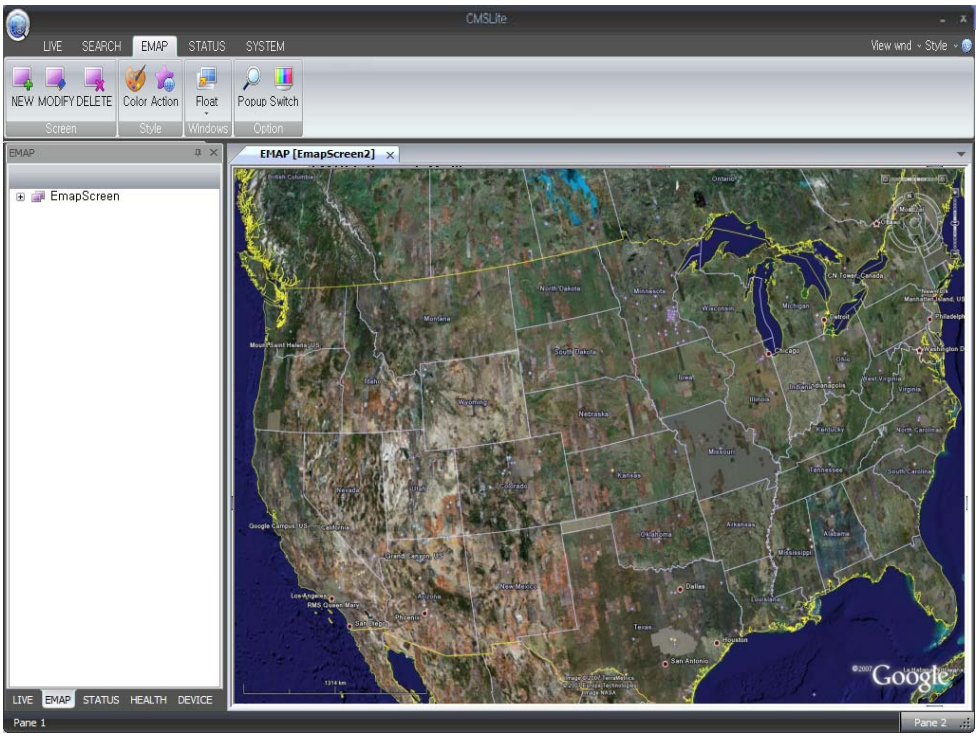

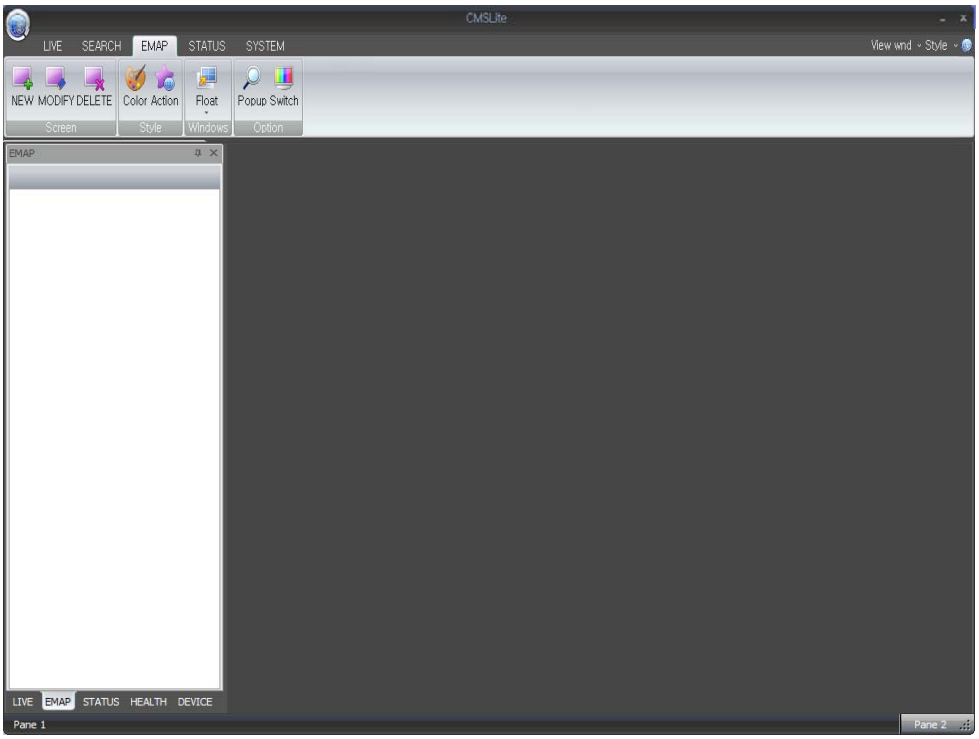

2.3.5 Bind Device to Emap Screen

- Now select DEVICE TAB on LEFT bottom Panel, then expand the tree
- Drag & Drop the CAMERA ITEM to Right window Panel, It could blind Device to Live Screen.

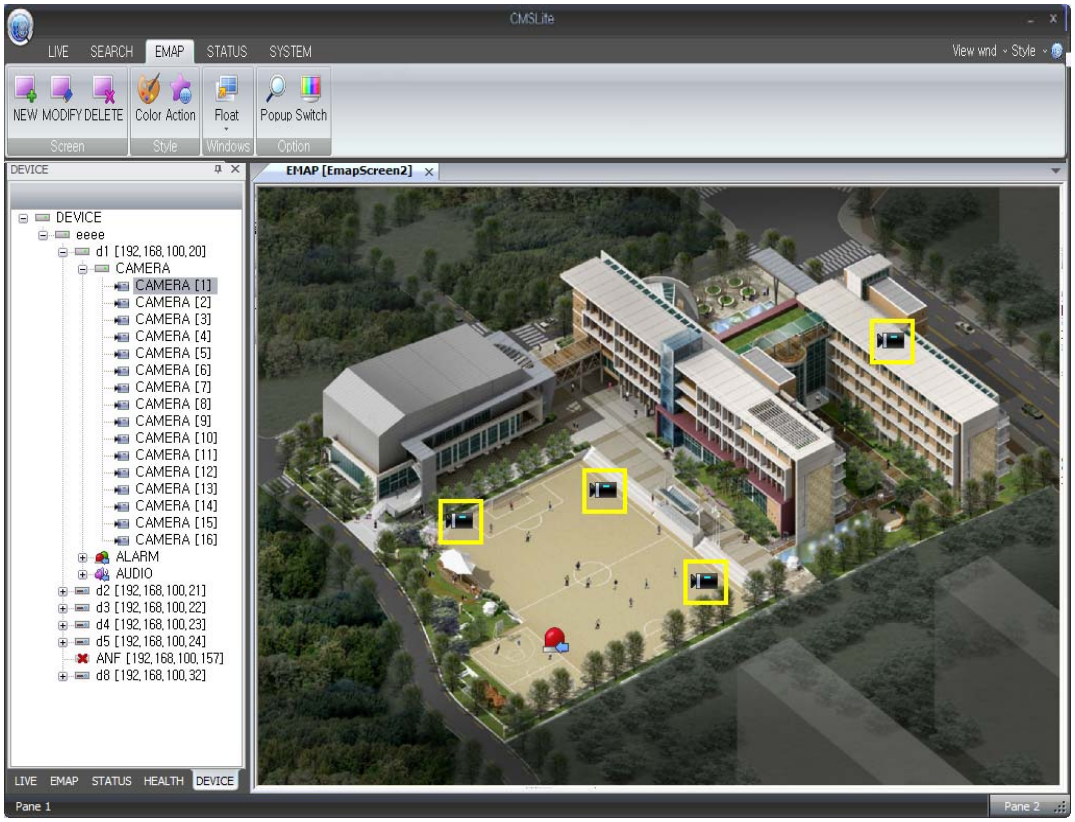

2.3.6 Emap Screen Event Color

Click the [EMAP] -> [Color] menu on selected EMAP Screen and output Next screen, then it could select wanted Event Action Color.

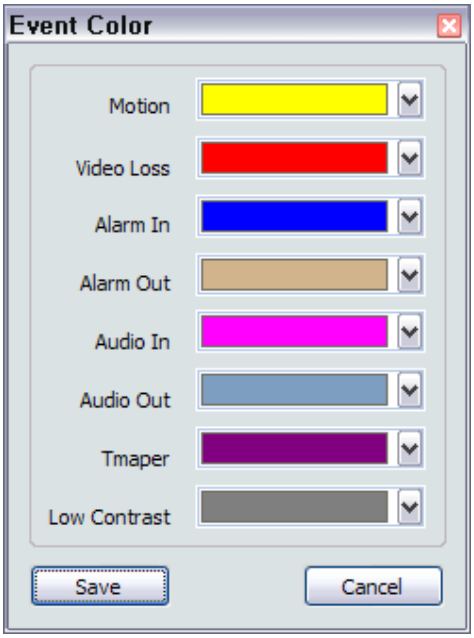

2.3.7 Emap Screen Event Action

Click the [EMAP] -> [Action] menu on selected EMAP Screen and output Next screen, then it could select wanted Event Action UI.

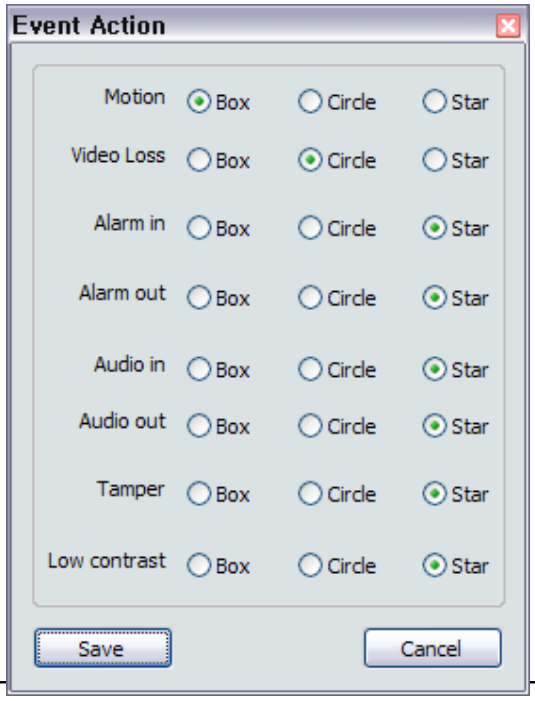

2.3.8 Emap Screen Popup (Manual/ Auto)

Click the [EMAP] -> [Popup] menu on selected EMAP Screen, then, Mini Live Screen could be pop-up as double-clicking icon as below.

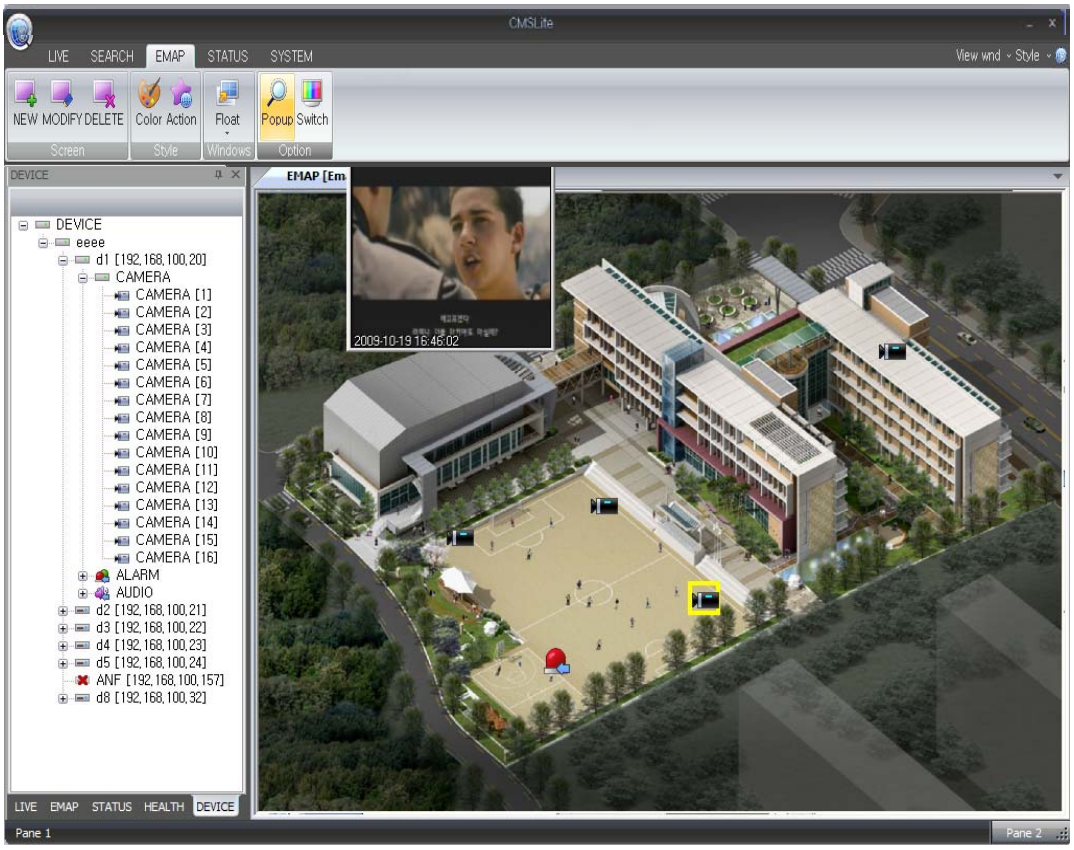

NOTE: **It could coincide 8 Emap Event Popup Screens.**
8 Popup Screens from the first detected Sensor -> The next event Popup after 10 second.

2.3.9 Emap Screen Switch(Manual/ Auto)

- Now select DEVICE TAB on LEFT bottom Panel, then expand the tree
- Drag & Drop Screen from Emap Screen tree on selected EMAP Screen, then generate Yellow Link shape Icon.
- Move Emap Screen as double-click
- When clicking the [EMAP] -> [Switch] menu, move automatically.
- When registering screen of Link icon happens to event, move automatically.

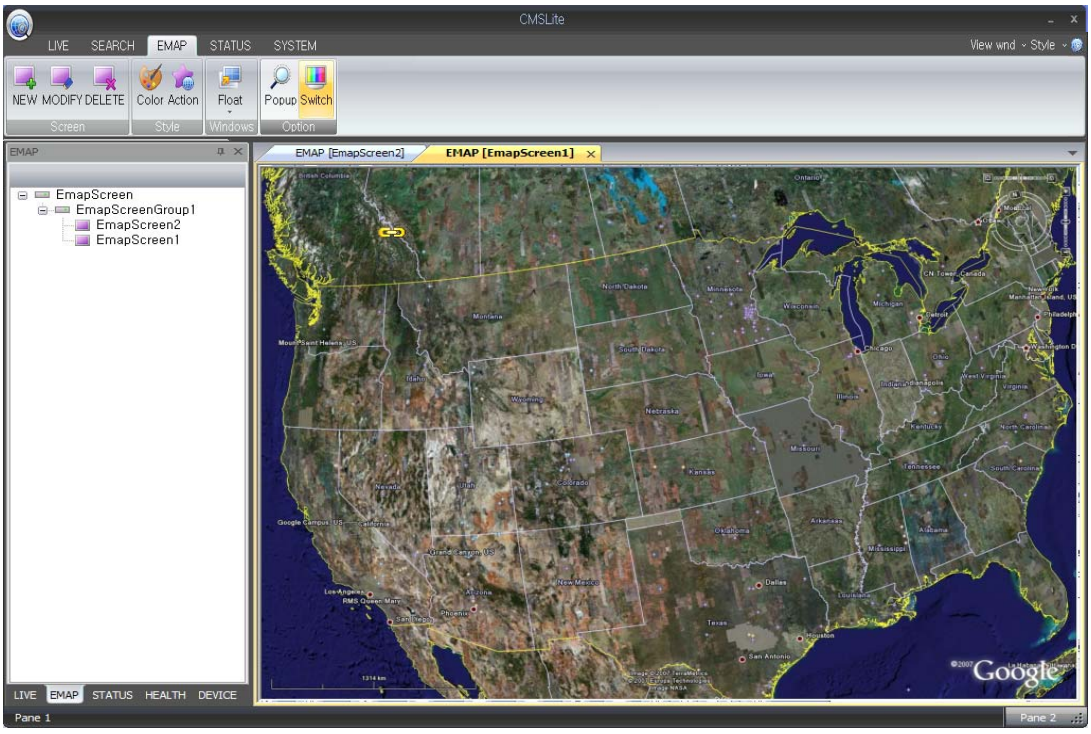

2.4 STATUS

2.4.1 Summary

- Show the event (video, audio, alarm) which performs in the facility linked with DMS64 by icon independent by channel for virtualization and at the same time to be able to monitor several facilities and all channels at real-time.

2.4.2 Create a STATUS Screen

- Click [EMAP] -> [NEW] to see the Status registration window on the DMS64 menu.

Click the [+] button as below to see Emap Group registration screen

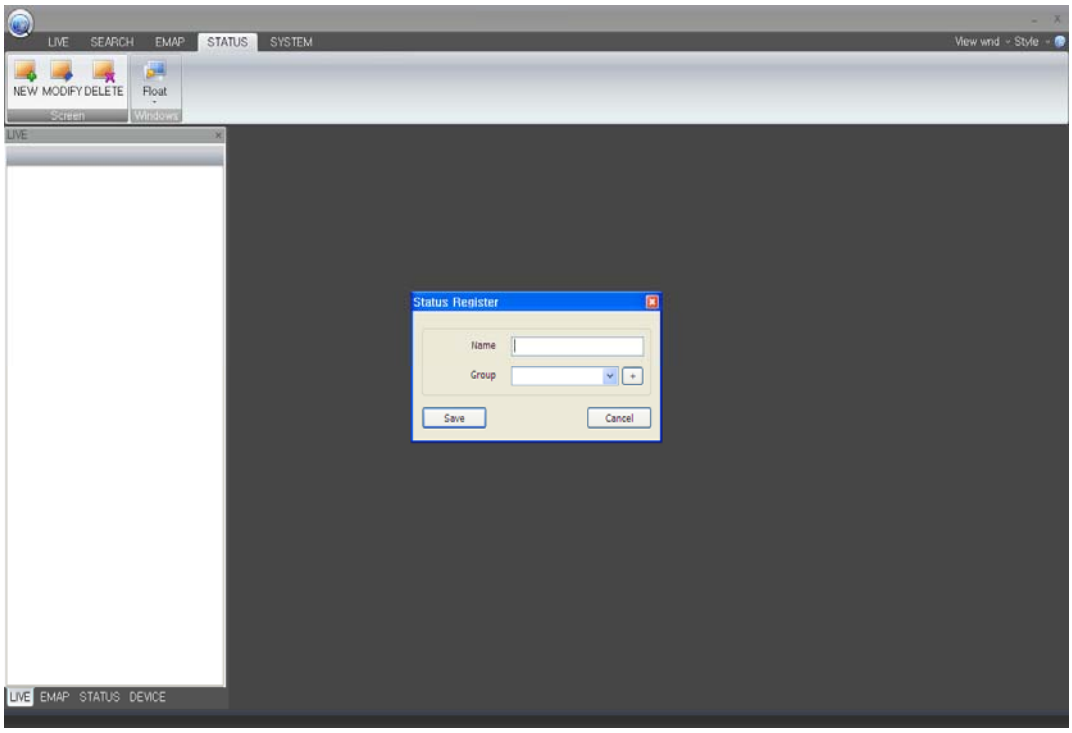

Click the [+] button as below to see Status Group registration screen.

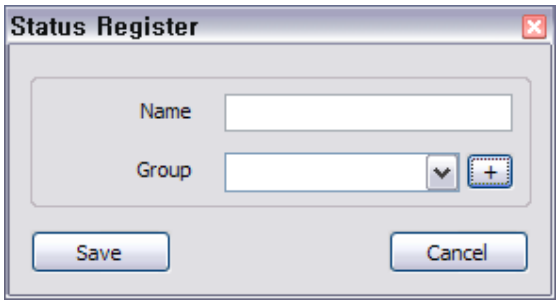

Click the ADD after input Group name as below.

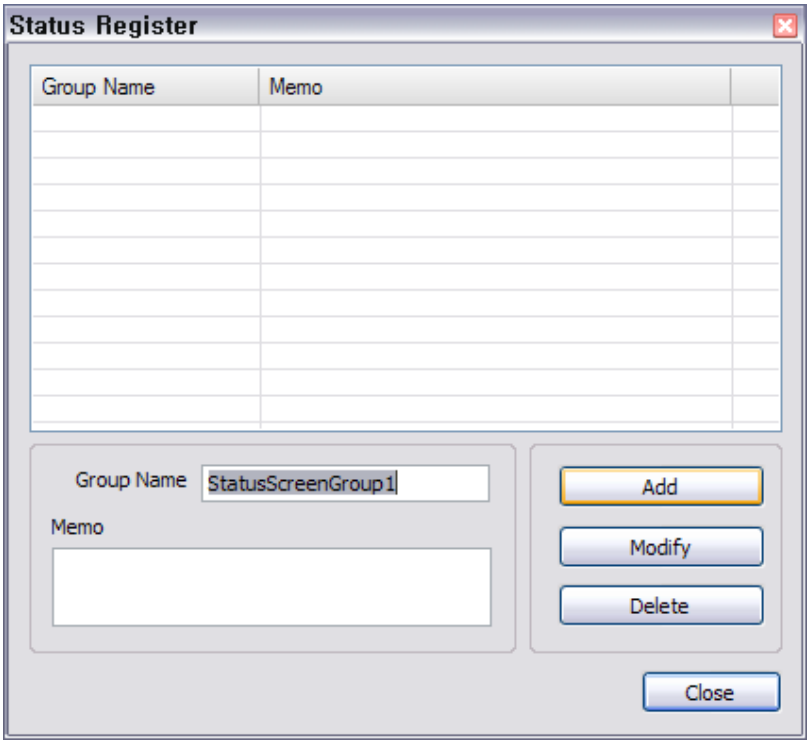

Click the Save after input Screen name as below.

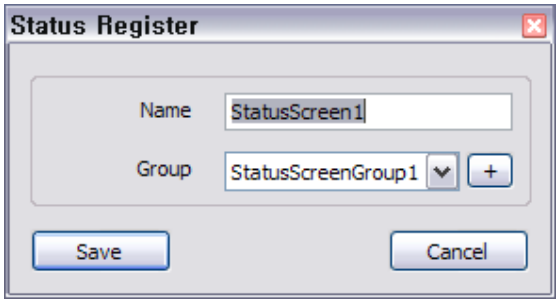

Generate Empty STATUS Screen as below.

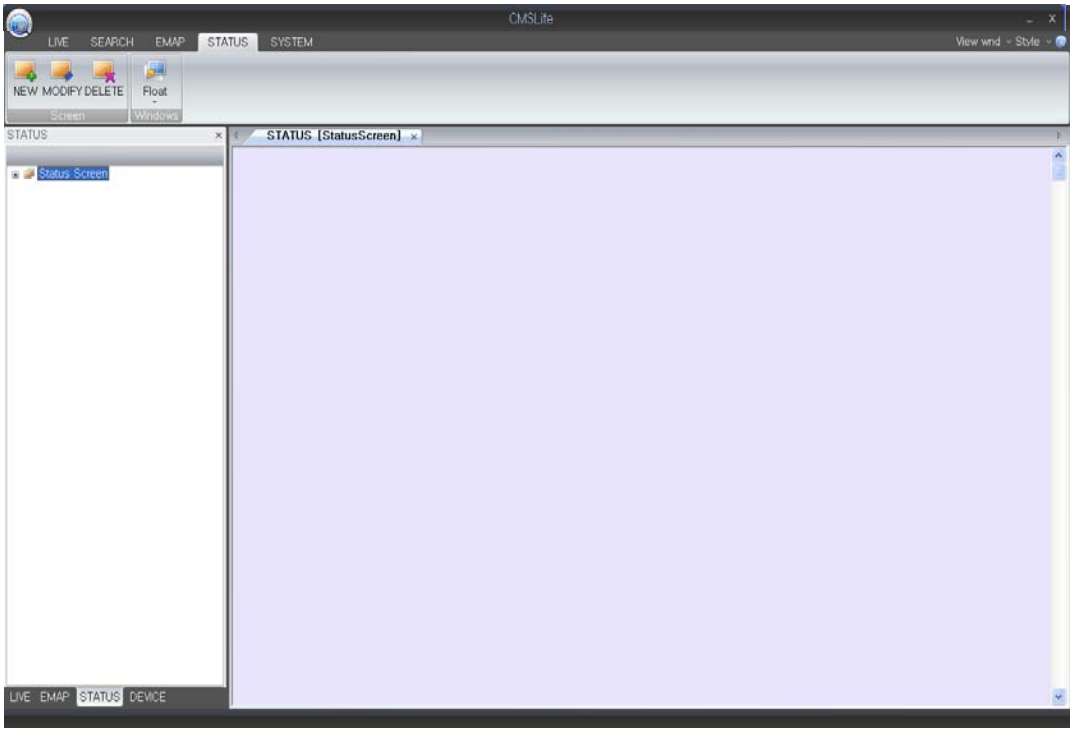

2.4.3 Modify a STATUS Screen

Click [STATUS] -> [MODIFY] on selected Status Screen, then it could see Modify screen of Status Screen as below.

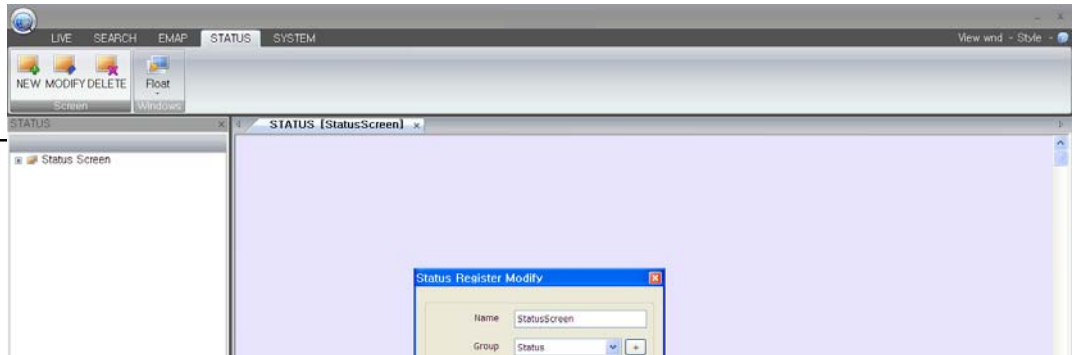

On Screen, after changing the Screen name of Name, changing content could be applied to save on DMS64.

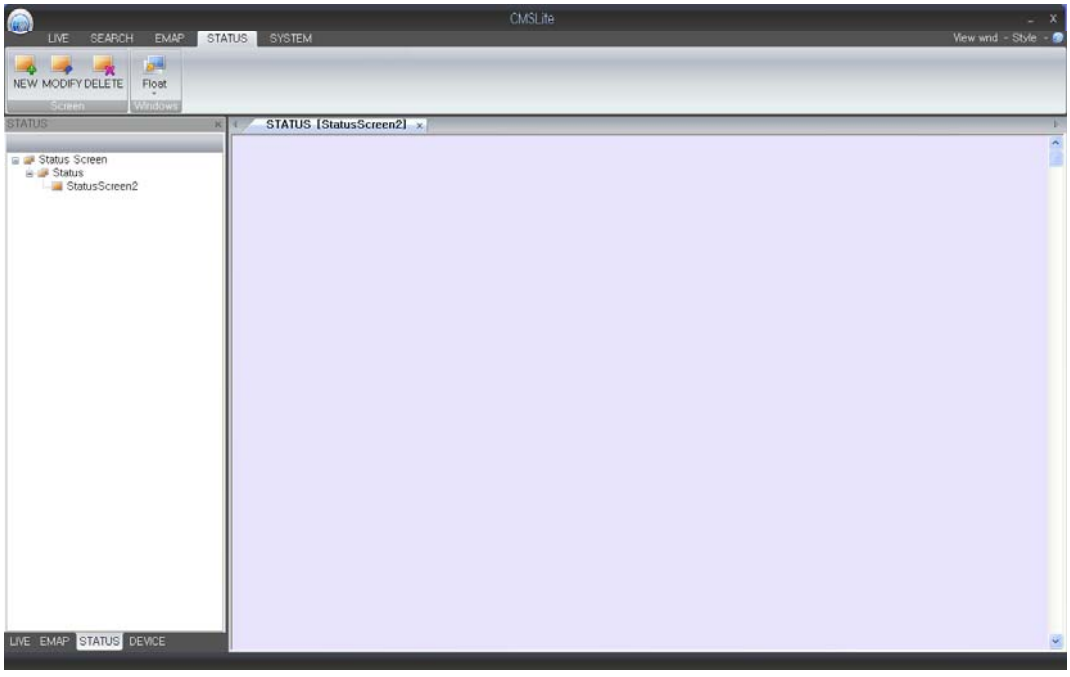

2.4.4 Delete a STATUS Screen

If you click the [STATUS] -> [DELETE] on selected Status Screen, delete Status Screen.

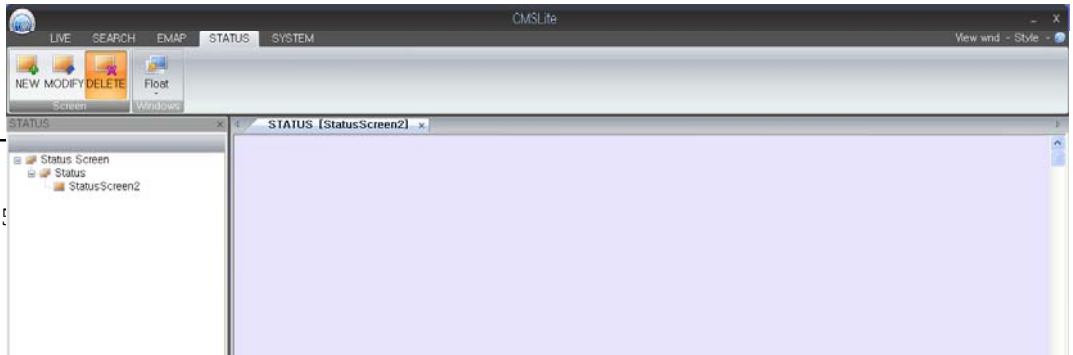

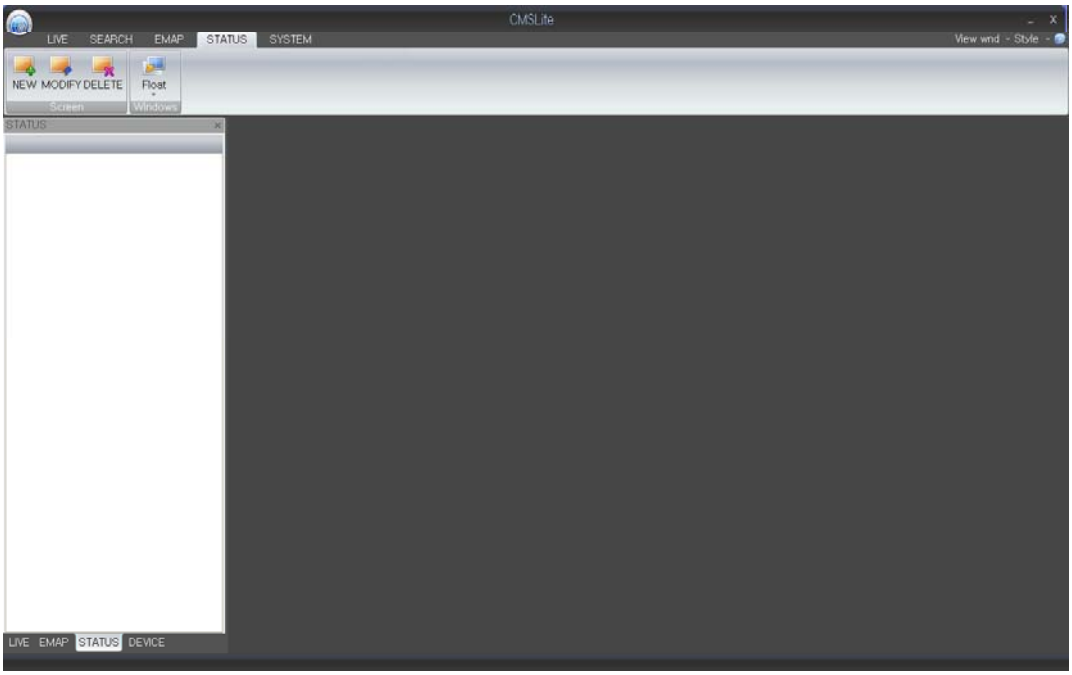

2.4.5 Bind a STATUS Screen.

Now select DEVICE TAB on LEFT bottom Panel.

Drag & Drop the Device ITEM to Right window Panel, It could blind Device to Live Screen

(Group Drag &Drop)

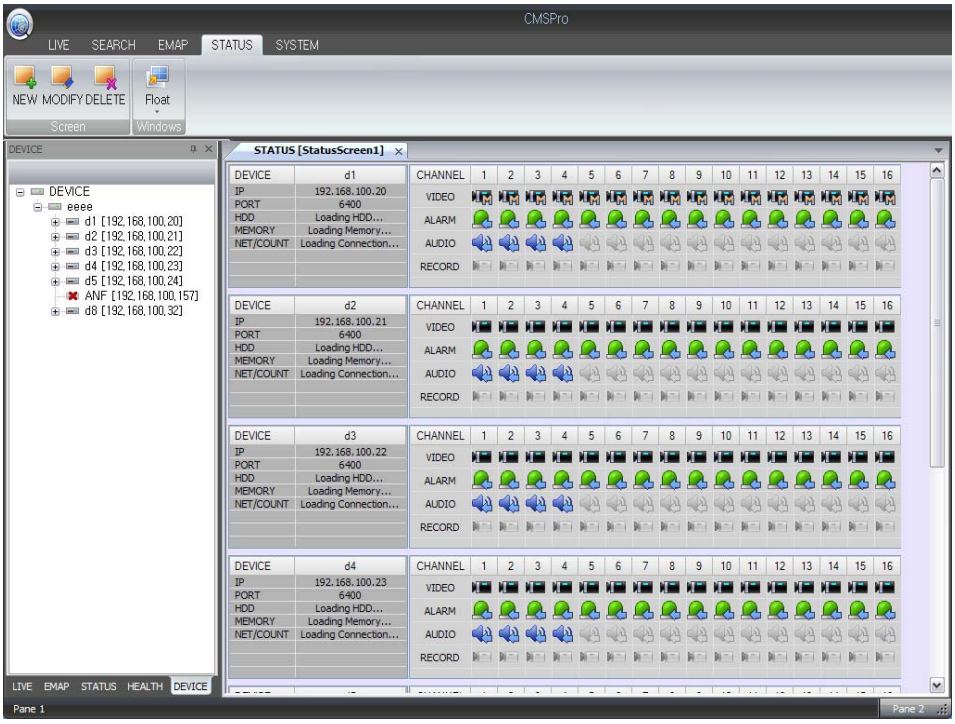

2.4.6 STATUS Screen Event Icon

It could check per CH Event information after Device Registration as below.

(Motion, Video Loss, Alarm, Audio Event)

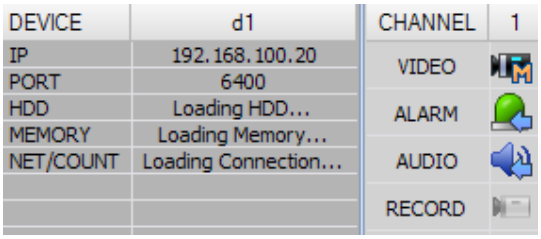

2.4.7 STATUS Screen Popup

Click the Channel of registered Device on Status Screen, then, it could see Live Video of selected channel as below.

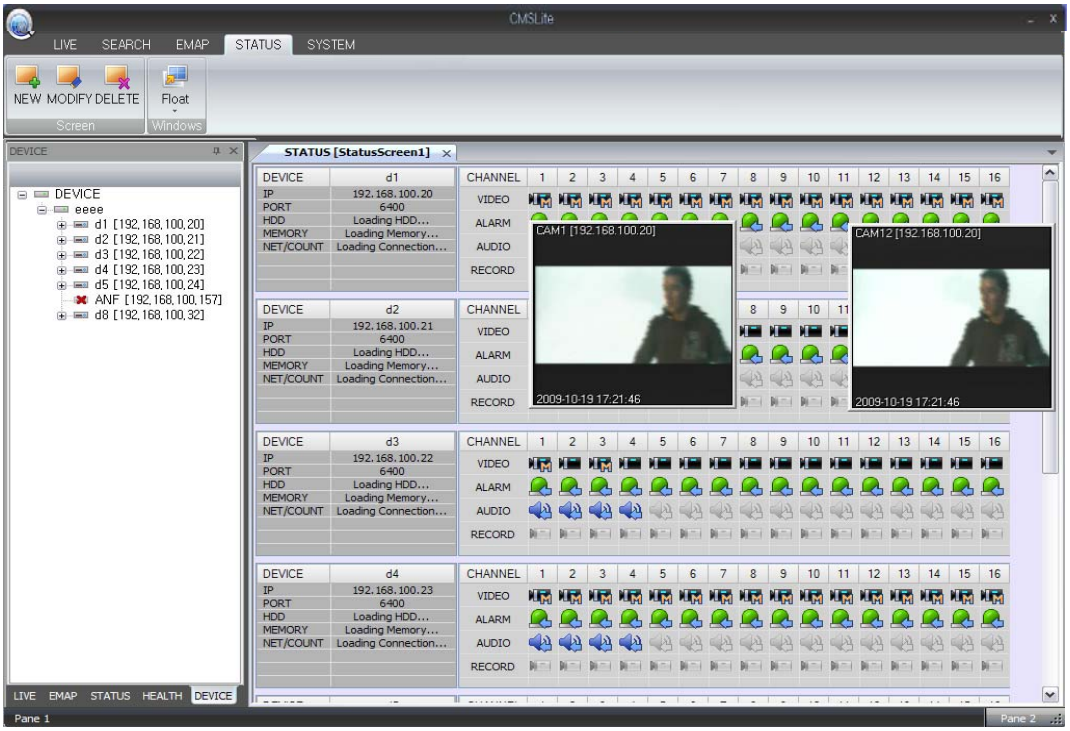

2.5 System

2.5.1 Summary

- It could generally work with Register/Setup/Search on DMS64.

2.5.2 System Button State

- Register
  - Device : Register Device for connection.
  - User : Register User for working DMS64.
  - IP Camera : Register Local Record as IP Camera.
- Archive
  - Snapshot : Set to work Snapshot.
  - Archiving : Set to work Archiving.
- Log
  - Device : Search DVR Log.
  - System : Search DMS64 Log.
  - Setup : Set DVR setup by remote.
- Connect
  - Connect : Try to connect registered DVR information.
  - Disconnect : Try to disconnect registered DVR information.

.

2.5.3 Device (Register)

- Register the Device.
- Add : Register after putting in setup content.
- Modify : Modify selected List from registered.
- Delete : Delete selected List from registered.

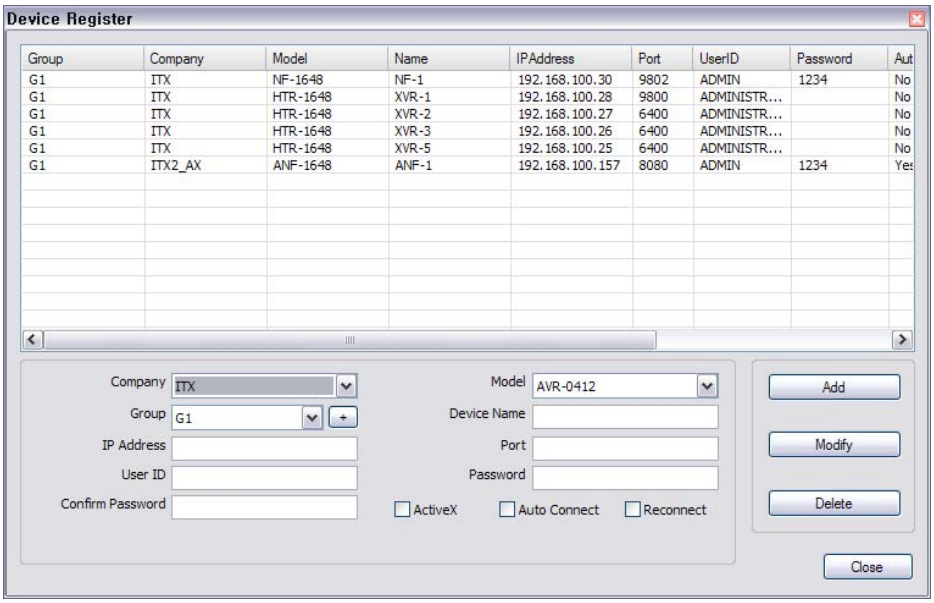

- The Company selection tab.

  DR_N group – DR4N, DR8N(2), DR16N(2), DR8NRT, DR16NRT, DR4N-LITE

  IP_CAM - PIXELPRO(VGA), PIXELPRO(720P), PIXELPRO(1080P)

  DR_H group – DR4H, DR8H, DR16H

2.5.4 User (Register)

- Register DMS64 User.
- Level of authority for each user's DMS64 Control could be managed by registering profile for each authority.
- By default, the DMS64 is configured with a user ID of ADMIN, belonging to the ADMIN group and with a password of 1234.

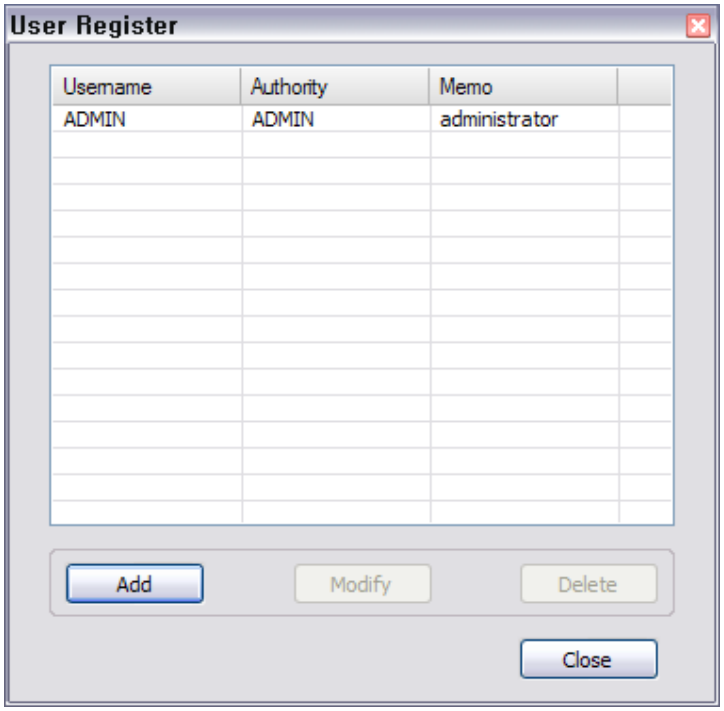

- Make Username, Password, Confirm, Authority, Memo with Add button.

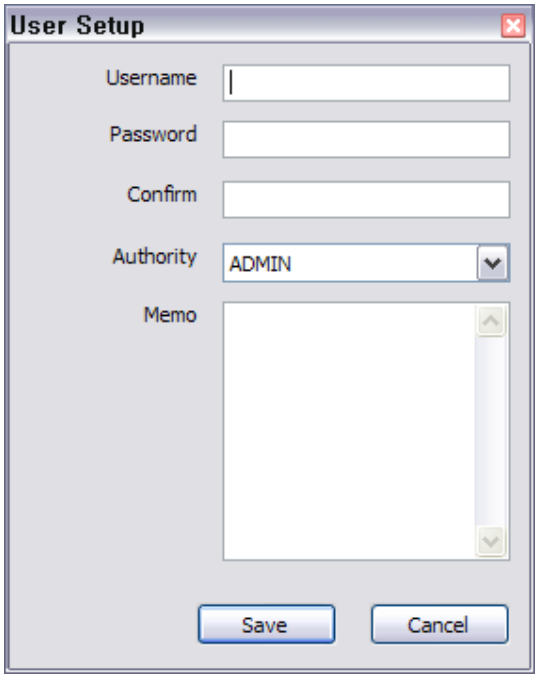

- Modify Selected List Content with Modify button.

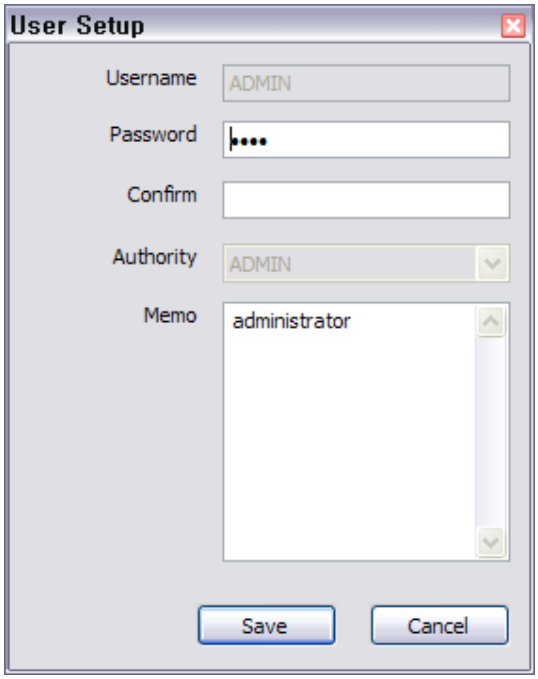

- Delete Selected List Content with Delete button.

2.5.5 NVR(Register)

- Set to Local Record of IP Camera in case of connecting IP Camera/ ANF Type devices. Device : Display the Device to be registered IP Camera.
- Folder

  Set up Folder on recording video data.

  It should have kept at least more than 1GB.
- HDD Size : Set up the recording space. (Max 1TB)
- File Name : Select the recording file name. (input except extension)
- Do Record : Select whether start the recording.
- Show the progress situation with progress bar for making the recording space of setting content, after finishing the set up and saving with Save.
- Display completed setting content on the left List.
- Screen on setting up

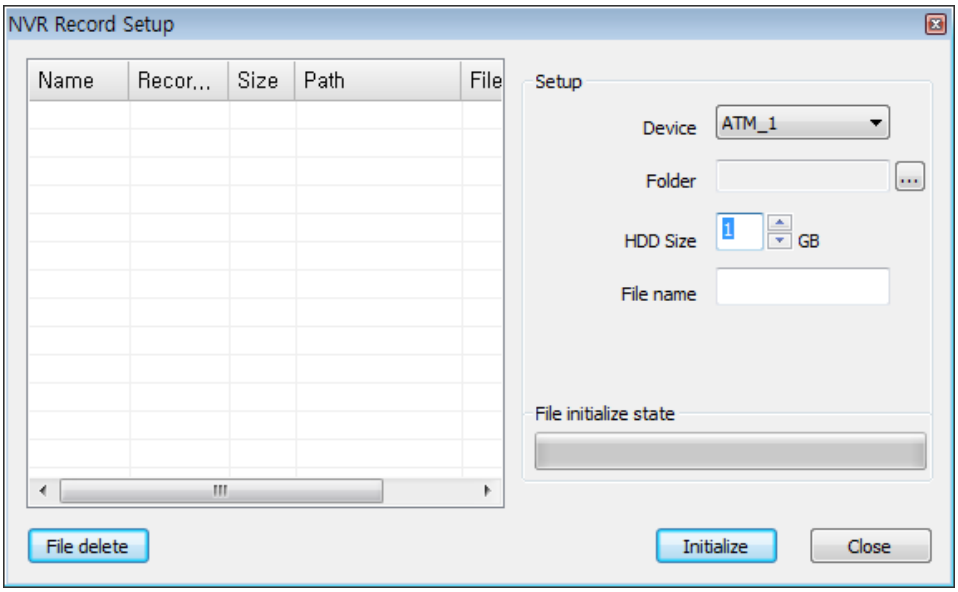

- Screen to be completed set up.

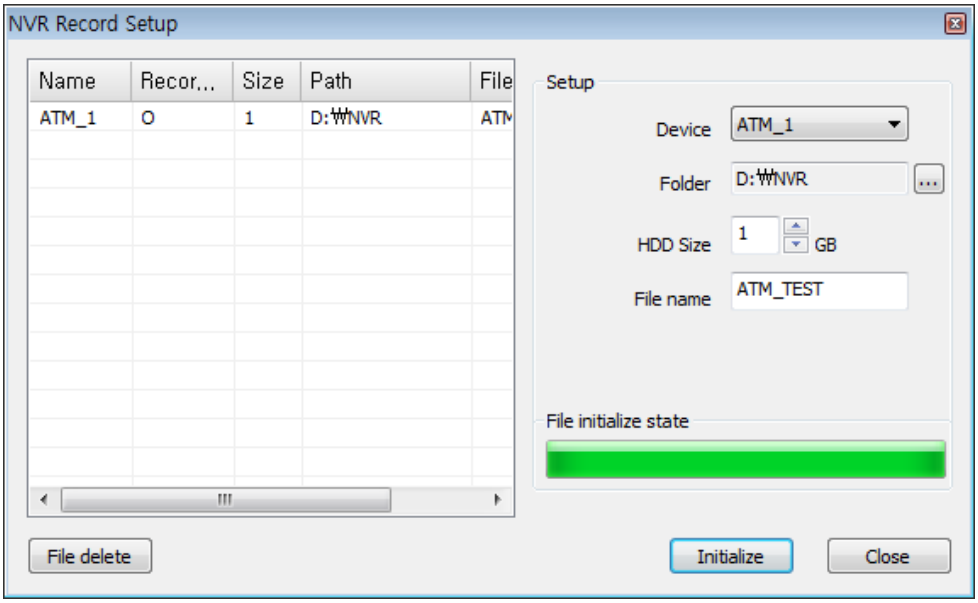

- Record the video data to setting up capacity on Overwrite mode in real time, before the end of the DMS64.
- It could see Search on recording data.

2.5.6 Snapshot (Archive)

- Set for Snapshot.
- Path : File Path for Save.
- File Type : Select BMP, JPG type.
- Auto : According to select Device Name and Camera Channel, Selected file is recorded to file name.
- Manual : Input the file name, as working Snapshot function, then record.

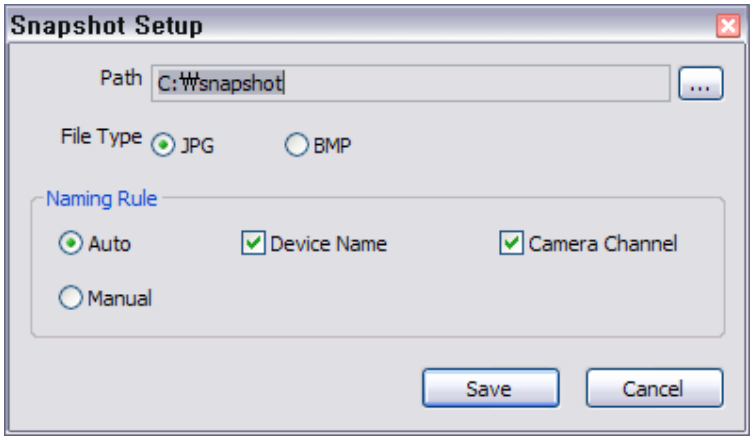

2.5.7 Archiving (Archive)

- Set for Archiving.
- Path : File Path for Save
- File Size

  Set the Maximum Recording Size per file.

  As exceeding the setting file size, it could be divided to record as much as setting size.
- Auto : According to select Device Name and Camera Channel, Selected file is recorded to file name.
- Manual : Input the file name, as working Archiving function, then record.

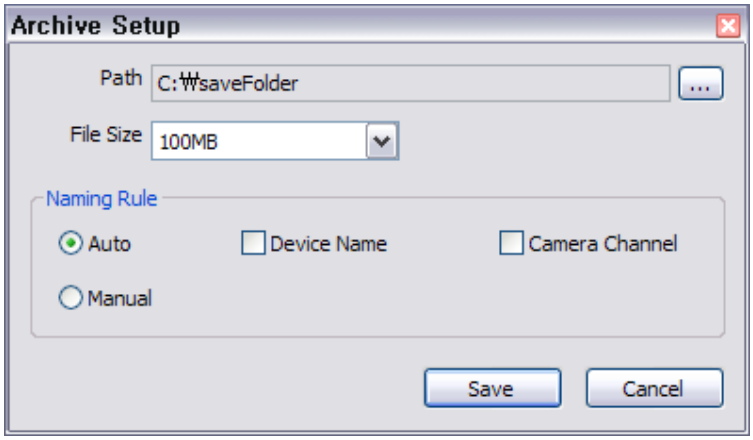

2.5.8 Device (Log) -> DVR Log

- Function to search the Log of the event as a list from the registered Device
- Don't Float More than 1 Screen.
- Time : Set the Time.
- Device : Select Device for Search.
- Option : Check the Filter for Search.
- Print : Can Print in case of Search content.
- Save to File

  Can Save File, if there is Search content.

  Recording Folder is same to Setup Path of [Archive]→[Archiving].

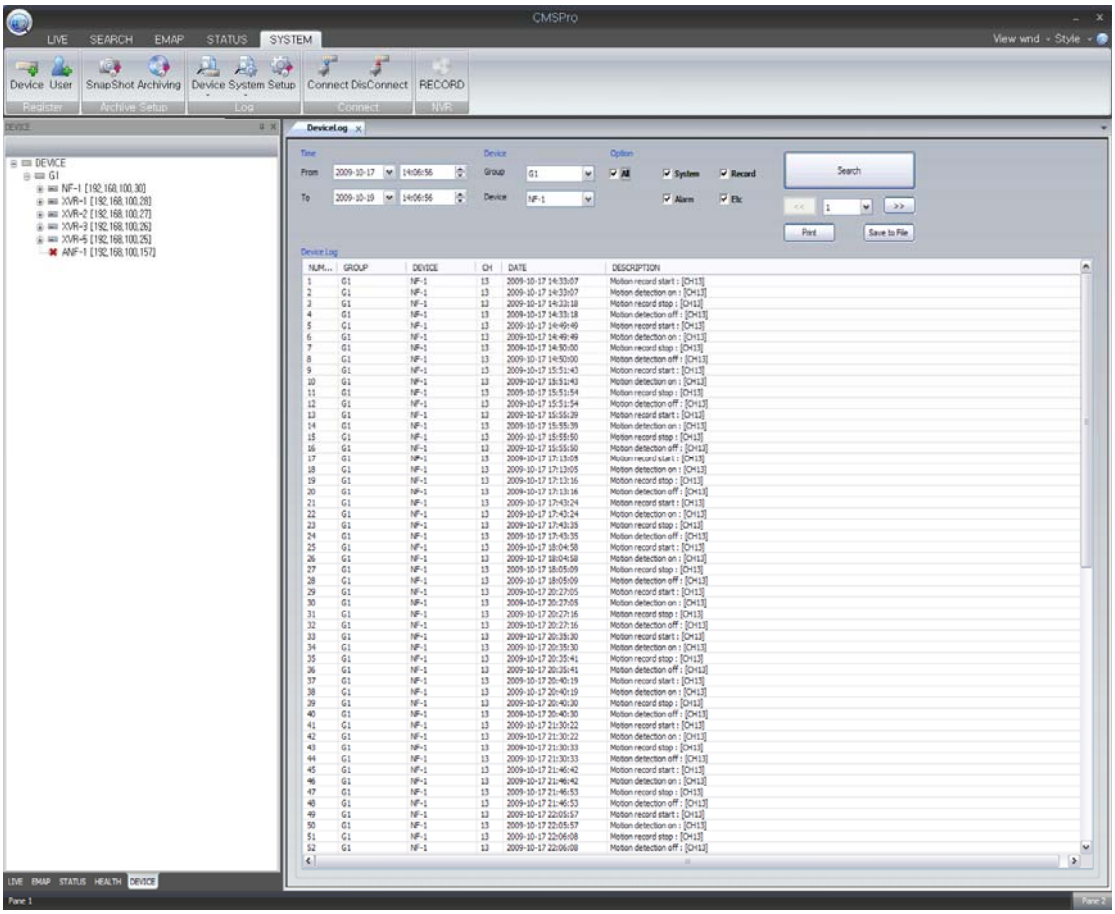

2.5.9 System (Log) -> DMS64 Log

- Function to search the Log as a list from the DMS64
- Don't Float More than 1 Screen.
- Time : Select the Search Time.
- Option : Check the divided Option for main function
- Print : Can Print in case of Search content.
- Save to File

  Can Save File, if there is Search content.

  Recording Folder is same to Setup Path of [Archive]→[Archiving].

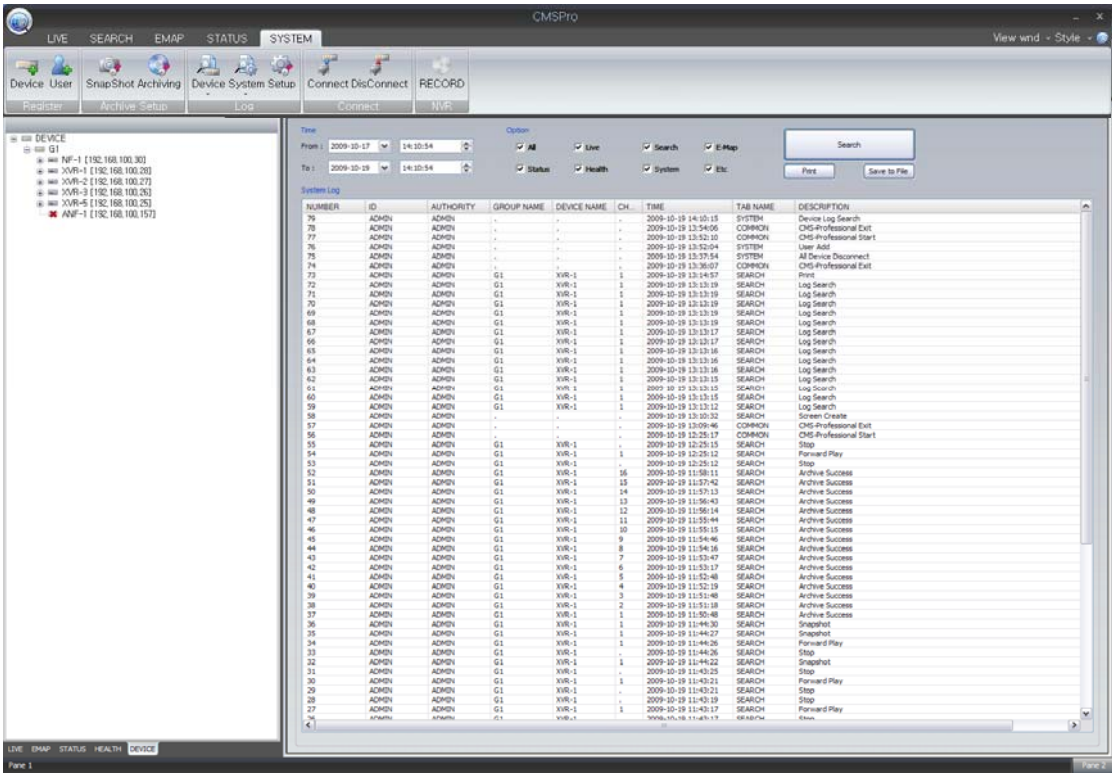

2.5.10 Remote Setup (Log)

- Run the Connecting Remote Setup of Connecting Device.
- It couldn't run several setting at the same time.
- Press the Select button after selecting Device.

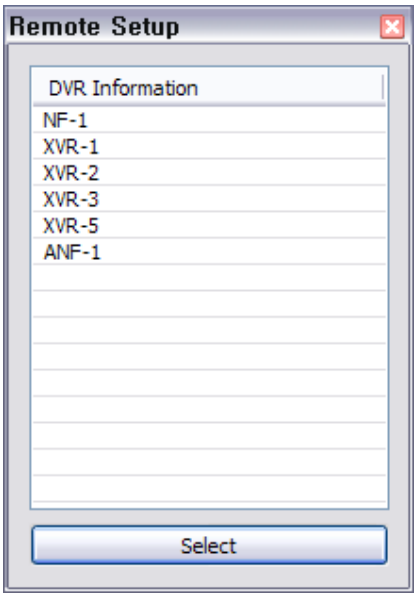

2.5.11 Connect (Connect)

- Connect Registered Device.

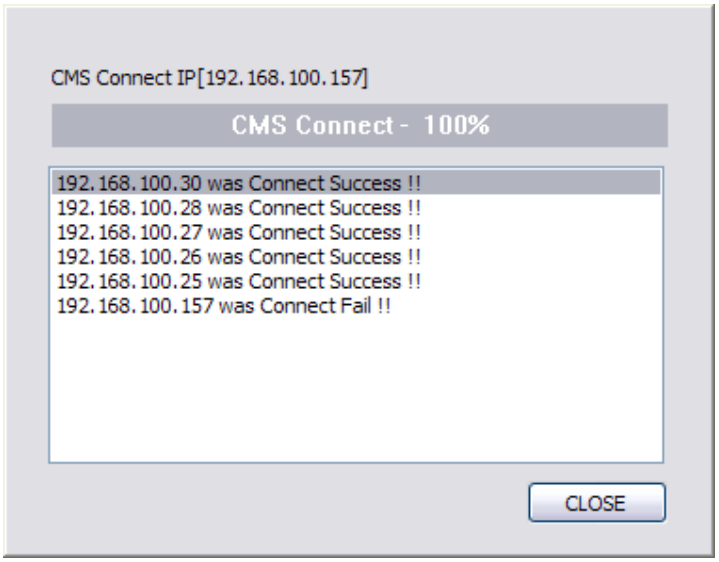
CMS Connect IP[192.168.100.157]
CMS Connect - 100%
192.168.100.30 was Connect Success !!
192.168.100.28 was Connect Success !!
192.168.100.27 was Connect Success !!
192.168.100.26 was Connect Success !!
192.168.100.25 was Connect Success !!
192.168.100.157 was Connect Fail !!
CLOSE

2.5.12 Disconnect (Connect)

- Disconnect Registered Device.